

REMOVAL PROCEDURE



S E R V I C E M A N U A L

2.8/4.2/5.0 kW Class



Indoor Unit



Inverter



Wall Mounted Type



Service Manual Removal Procedure

Indoor Unit

●Heat Pump

FTXR28EV1B9

FTXR42EV1B9

FTXR50EV1B9

Table of Contents

1. Air Filters / Panels	2
2. Front Grille	7
3. Front Panel Mechanism Assembly.....	9
4. Reduction Motor	10
5. Electrical Box	12
6. PCBs	15
7. Dehumidifying Solenoid Valve Coils	18
8. Connecting Duct.....	19
9. Drain Hose	20
10.Swing Motors	22
11.Indoor Heat Exchanger	24
12.Fan Rotor / Fan Motor.....	26
13.Horizontal Blades / Vertical Blades	28
14.Streamer Unit	30



Note:

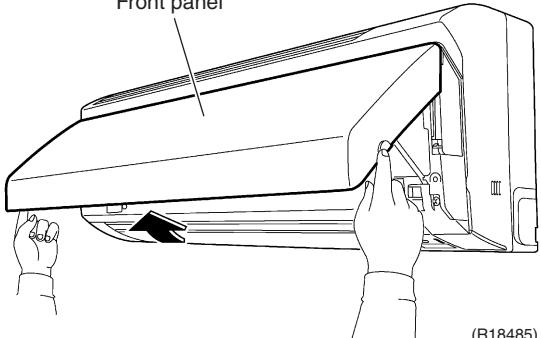
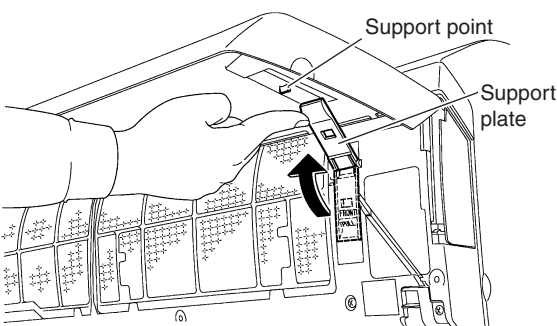
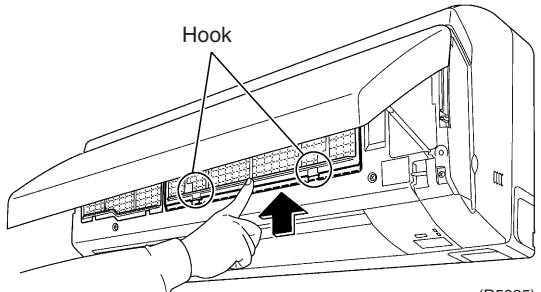
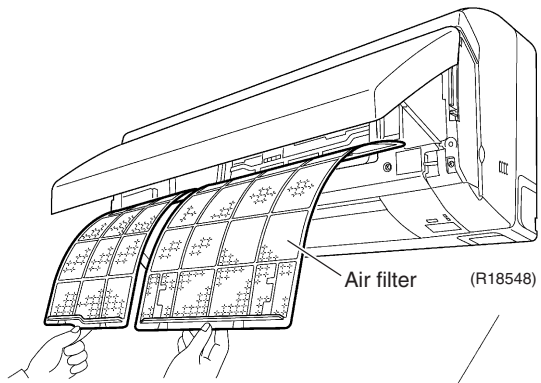
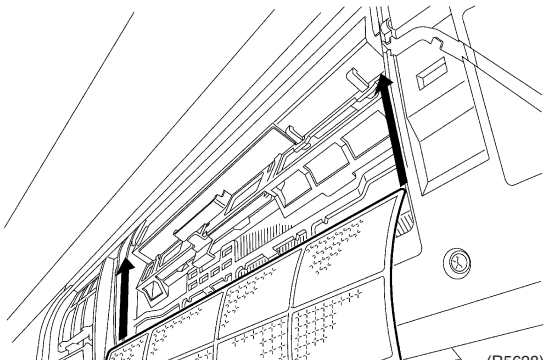
♦ The illustrations may be slightly different depending on the model.

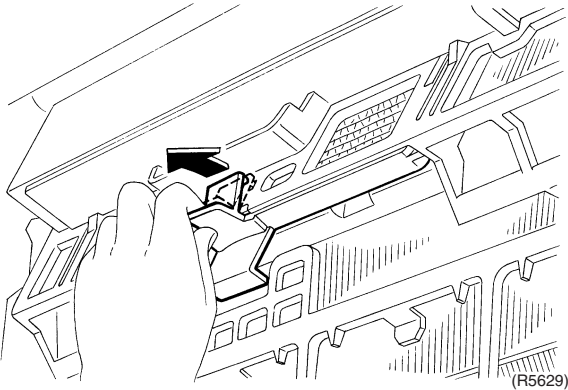
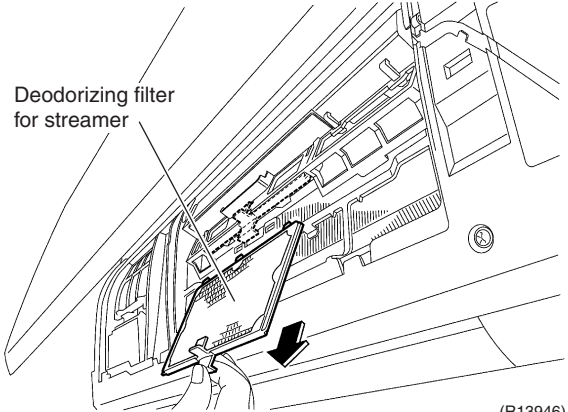
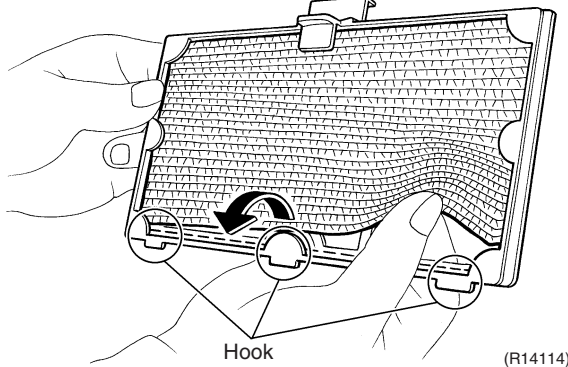
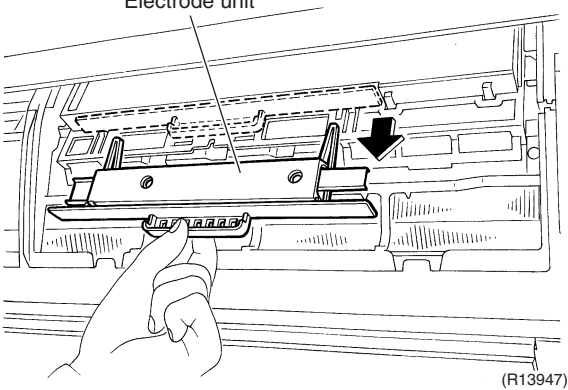
1. Air Filters / Panels

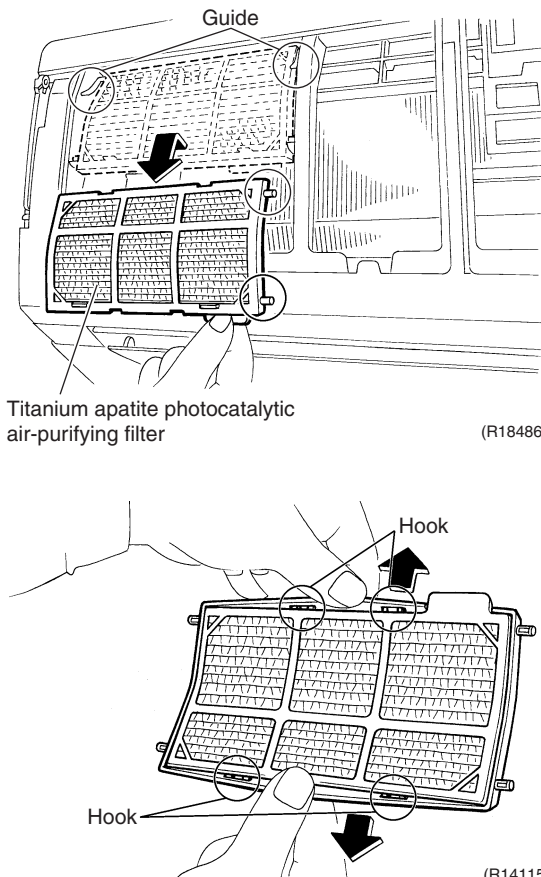
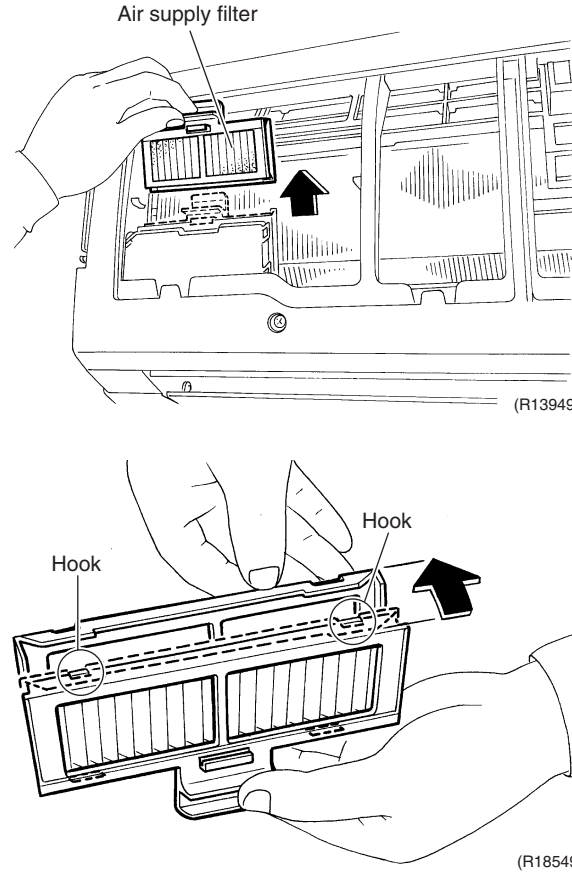


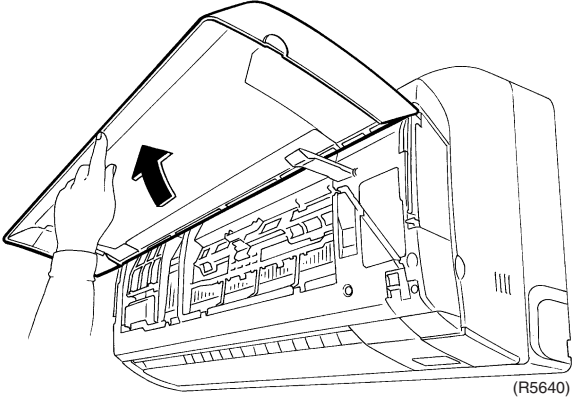
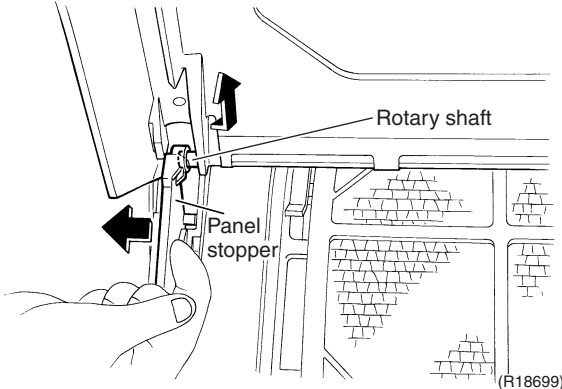
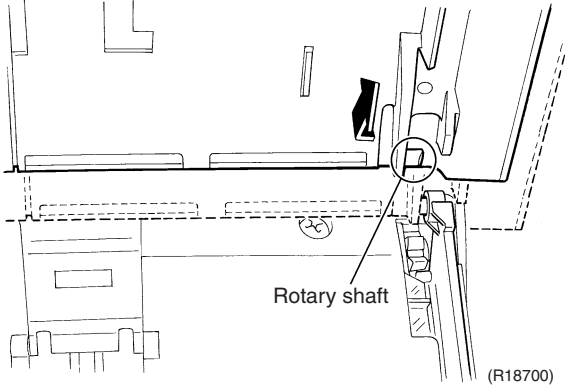
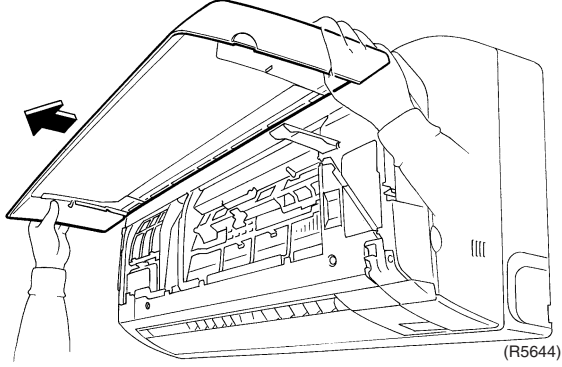
Warning

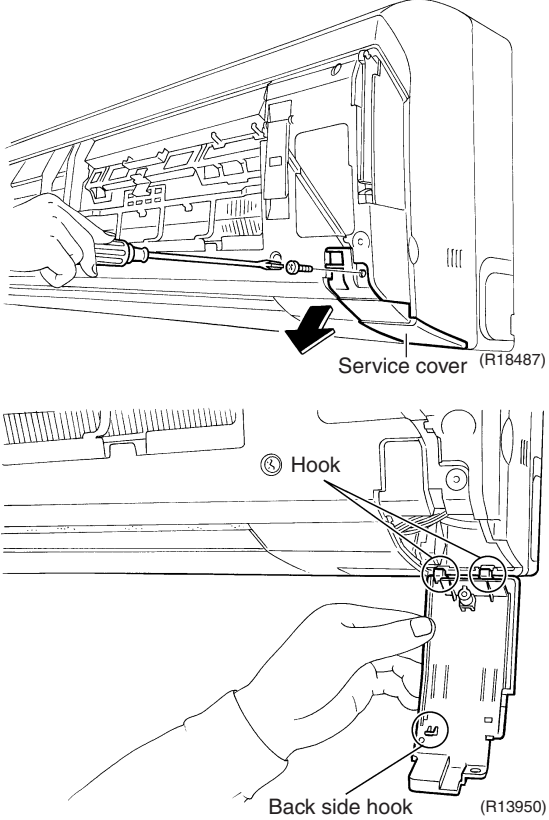
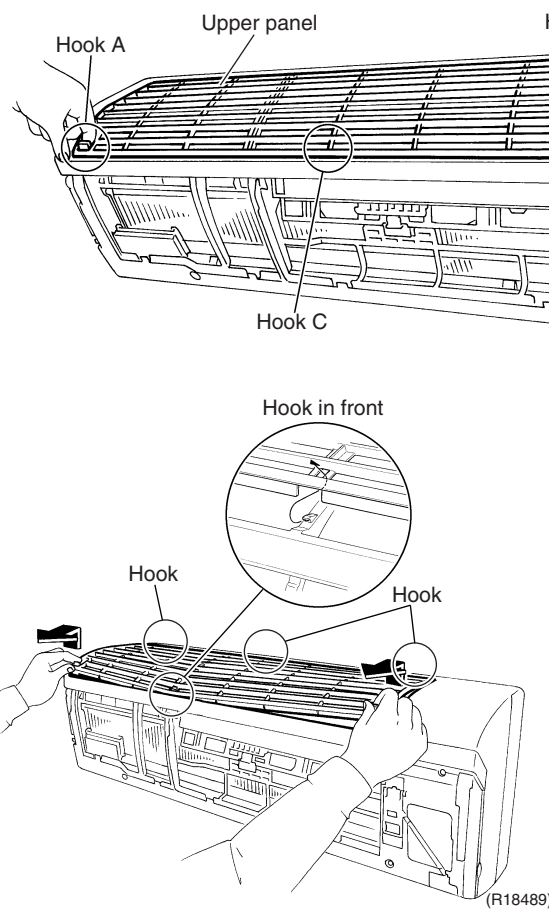
◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the air filters.		
1	Open the front panel.  <p style="text-align: right;">(R18485)</p>	
2	Keep the front panel open with the support plate.  <p style="text-align: right;">(R5624)</p>	
3	Push the air filter up.  <p style="text-align: right;">(R5625)</p>	
4	Pull the air filter downward and remove it.  <p style="text-align: right;">(R18548)</p>	<ul style="list-style-type: none"> ■ The shapes of the right and left filters are different. ■ Insert the filters along the guide for easy installation.  <p style="text-align: right;">(R5628)</p>

Step	Procedure	Points
<p>2. Remove the deodorizing filter for streamer.</p> <p>1 Pull the center knob to unfasten the hook.</p> <p>2 Pull out the deodorizing filter for streamer.</p> <p>3 Slide the filter and remove it.</p>	 <p>(R5629)</p>  <p>Deodorizing filter for streamer</p> <p>(R13946)</p>  <p>Hook</p> <p>(R14114)</p>	<p>■ When cleaning, keep the filter with the frame to prevent breakage.</p>
<p>3. Remove the electrode unit.</p> <p>1 Pull down the electrode unit with holding the knob.</p>	 <p>Electrode unit</p> <p>(R13947)</p>	

Step	Procedure	Points
<p>4. Remove the Titanium apatite photocatalytic air-purifying filter.</p> <p>1 Release the projection of the frame of Titanium apatite photocatalytic air-purifying filter and remove it.</p> <p>2 Remove the Titanium apatite photocatalytic air purifying filter.</p>	 <p>Titanium apatite photocatalytic air-purifying filter (R18486)</p> <p>Hook (R14115)</p>	<ul style="list-style-type: none"> ■ Insert the filter along the guide for easy installation.
<p>5. Remove the air supply filter.</p> <p>1 Lift the air supply filter up and take it out.</p> <p>2 Unfasten the 2 hooks to open the frame and remove the air supply filter.</p>	 <p>Air supply filter (R13949)</p> <p>Hook (R18549)</p>	<ul style="list-style-type: none"> ■ Insert the filter along the guide for easy installation. ■ Install the air supply filter correctly so that the front mark comes front. ■ Humidifying operation without installing the air supply filter may form condensation inside the front panel and it causes water leakage. ■ There are 4 hooks for the air supply filter.

Step	Procedure	Points
6. Remove the front panel.	<p data-bbox="156 248 448 344">1 Open the front panel over the stopping position.</p>  <p data-bbox="156 656 448 815">2 Push the panel stoppers outward on both sides to detach the rotary shafts from the holes.</p>  <p data-bbox="156 853 448 949">3 Slide the rotary shaft on the left to the right and pull it out.</p> <p data-bbox="156 1111 448 1207">4 Slide the rotary shaft on the right to the left and pull it out.</p>  <p data-bbox="156 1576 448 1637">5 Remove the front panel.</p> 	

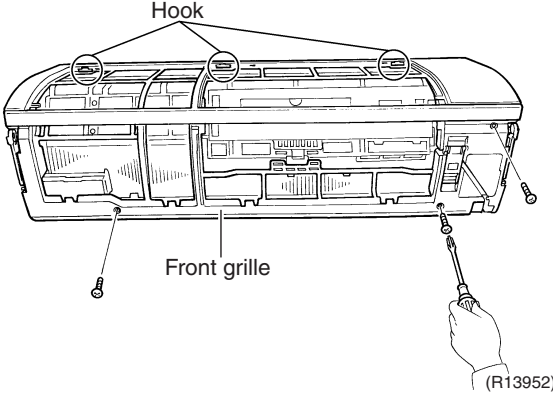
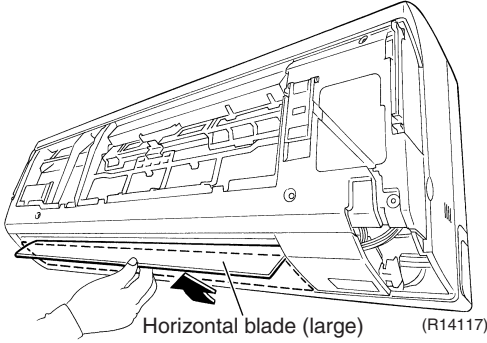
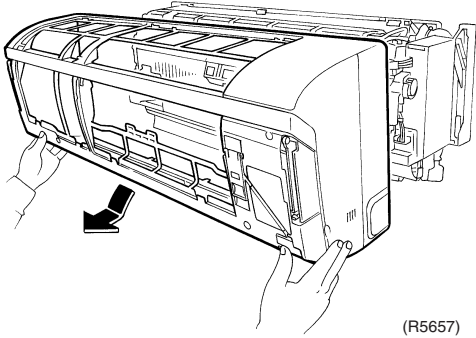
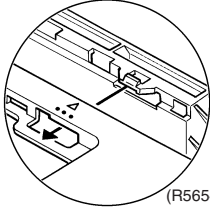
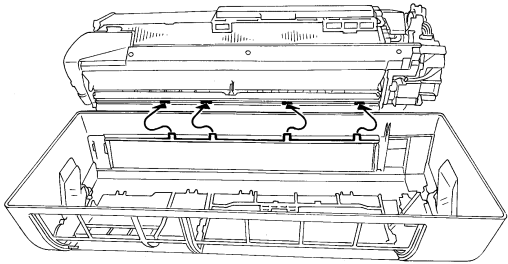
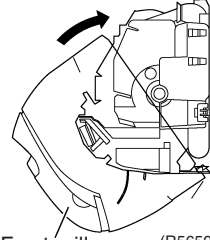
Step	Procedure	Points
<p>7. Remove the service cover.</p> <p>1 Remove the screw (black) of the service cover.</p> <p>2 Slide the service cover downward to unfasten the hook on the back side.</p> <p>3 Remove the service cover.</p>	 <p>Service cover (R18487)</p> <p>Hook</p> <p>Back side hook (R13950)</p>	<ul style="list-style-type: none"> When reassembling, catch the 2 hooks on the far side first, and close the cover.
<p>8. Remove the upper panel.</p> <p>1 Pinch and unfasten the hook A and hook B.</p> <p>2 Lift the right and left sides to bend the upper panel and slightly pull it to unfasten the hook C.</p> <p>3 Pull the upper panel and remove it.</p>	 <p>Hook A</p> <p>Upper panel</p> <p>Hook B</p> <p>Hook C</p> <p>Hook in front</p> <p>Hook</p> <p>Hook</p> <p>(R18488)</p> <p>(R18489)</p>	<ul style="list-style-type: none"> When reassembling, make sure to catch the 3 hooks on the far side.

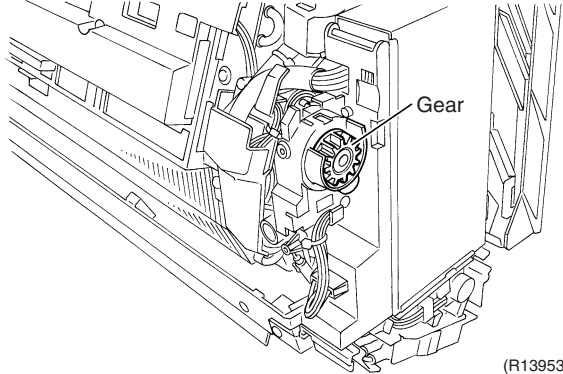
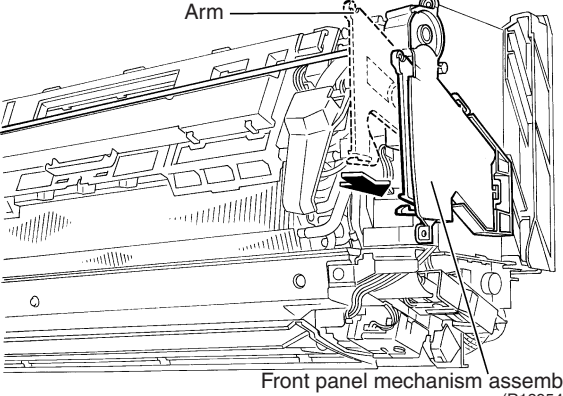
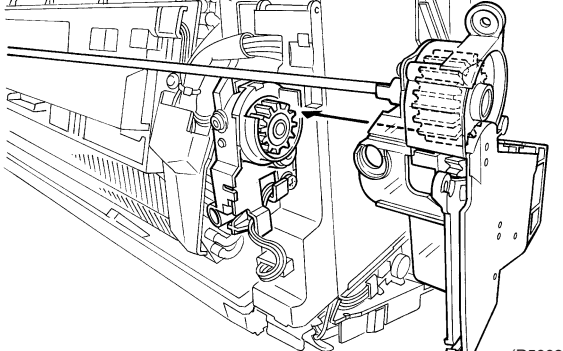
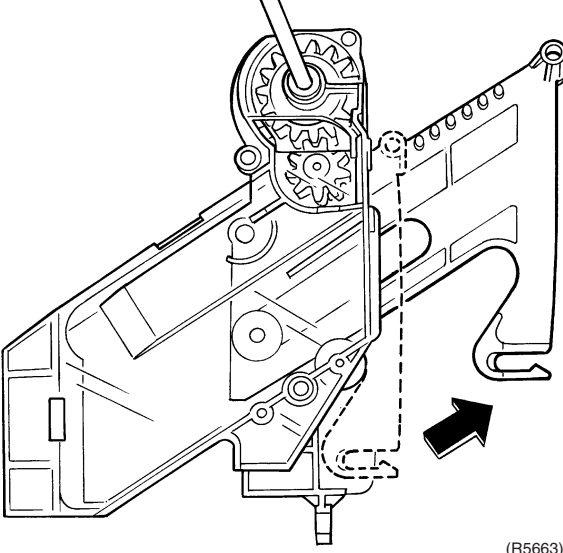
2. Front Grille



Warning

◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the front grille.</p> <p>1 Remove the 3 screws.</p> <p>2 Unfasten the upper 3 hooks.</p> <p>3 Open the horizontal blade (large) fully for preventing it from getting caught in pulling the front grille out.</p> <p>4 Remove the front grille.</p>	  	<ul style="list-style-type: none"> ■ If the hooks are hard to be unfasten, use a flat screwdriver. ■ The convex marks (...) on the front panel indicate the position of the hooks. 
<p>2. Points on installing the front grille</p> <p>1 When reassembling the front grille, fit the 4 lower hooks and push in until they click.</p>		<ul style="list-style-type: none"> ■ When reassembling, make sure that the horizontal blade (large) does not come inside. ■ When reassembling, follow the same steps for removal in reverse. 

Step	Procedure	Procedure	Points
2	There is a gear for front panel driving.	 <p>(R13953)</p>	
3	The front panel mechanism assembly is fixed to the front grille. Check that the arm is in the stored position.	 <p>Front panel mechanism assembly (R13954)</p>	
4	Installation structure	 <p>(R5662)</p>	
5	Movement of the arm	 <p>(R5663)</p>	

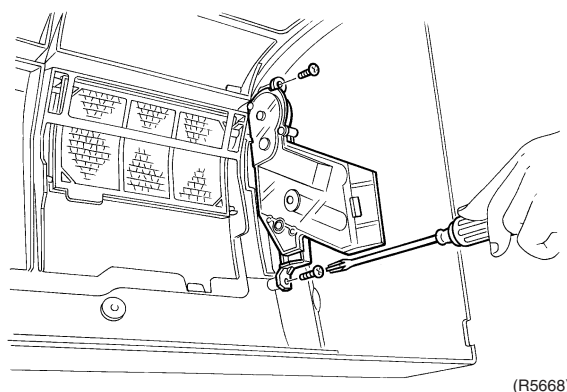
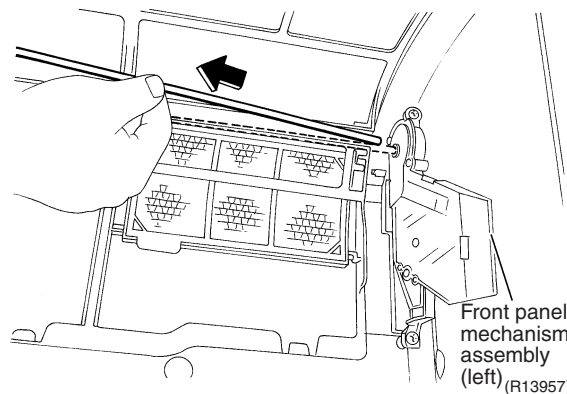
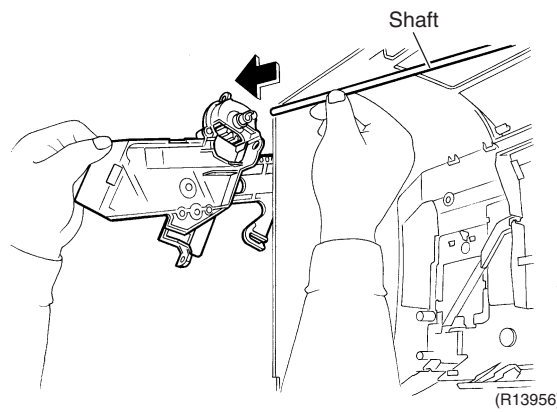
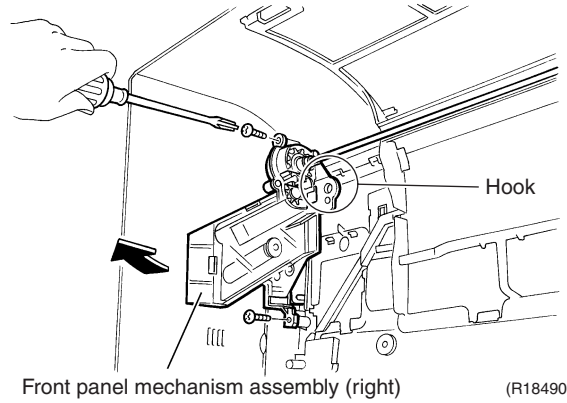
3. Front Panel Mechanism Assembly



Warning

- ◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the 2 screws.	
2	Unfasten the hook while straightening the front panel mechanism assembly (right) and remove it.	<ul style="list-style-type: none"> ■ When reassembling, catch the hook first.
3	Pull out the front panel mechanism assembly (right) from the shaft.	<ul style="list-style-type: none"> ■ Replace the front panel mechanism as an assembly kit.
4	Pull out the shaft from the front panel mechanism assembly (left).	
5	Remove the 2 screws.	<ul style="list-style-type: none"> ■ Replace the front panel mechanism as an assembly kit.
6	Remove the front panel mechanism assembly (left).	

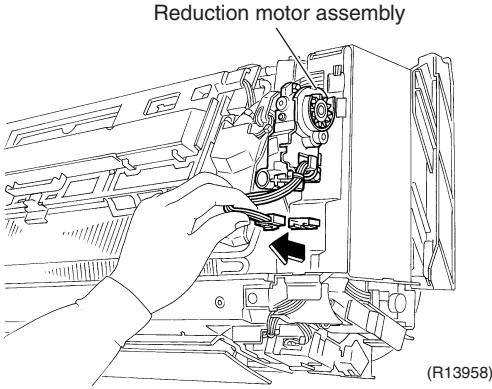
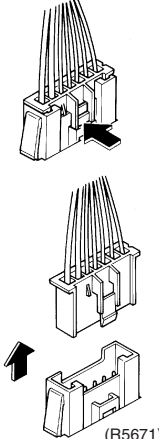
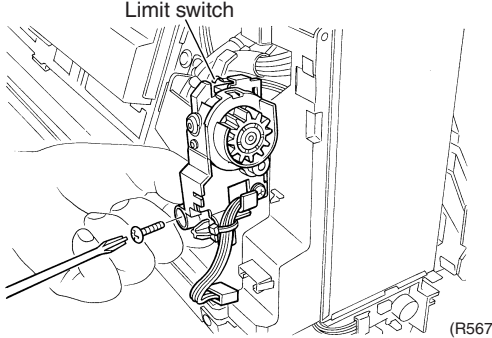
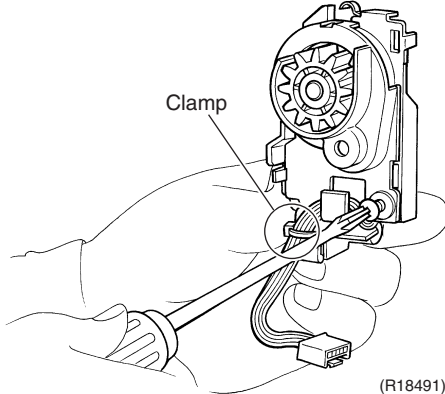
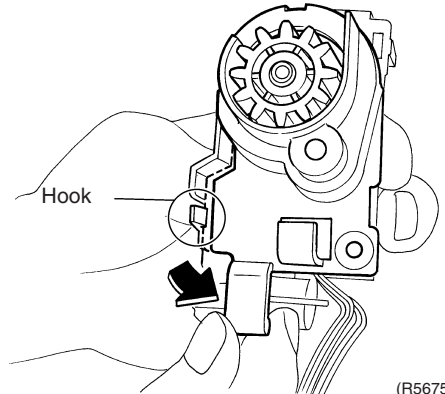


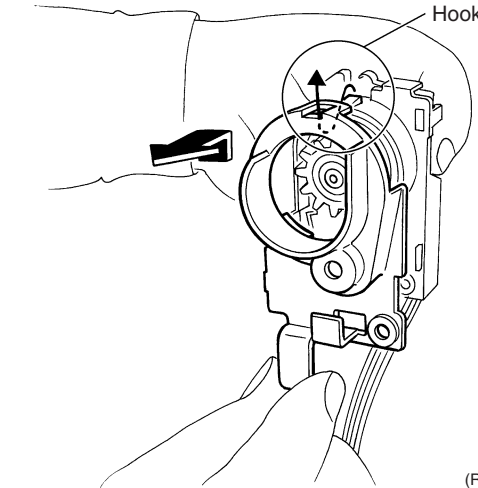
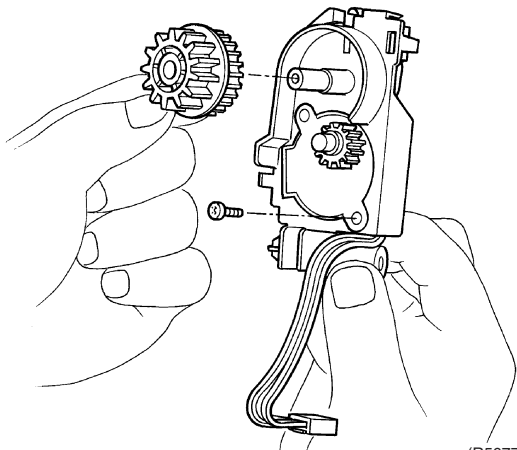
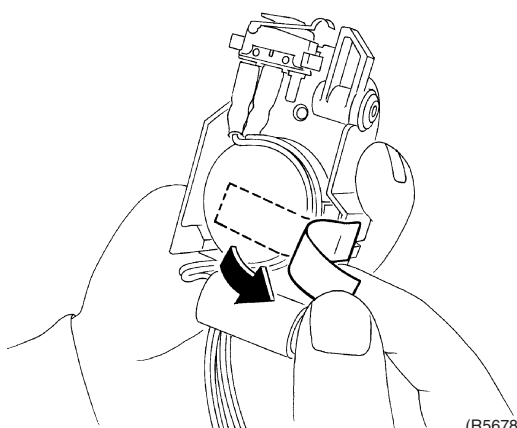
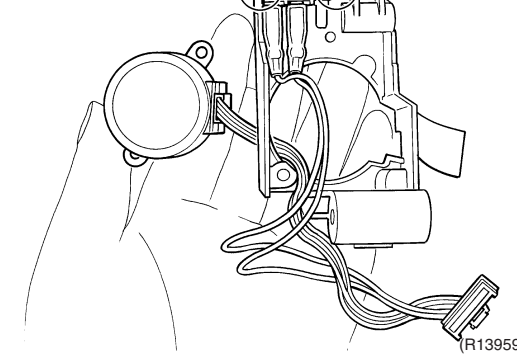
4. Reduction Motor



Warning

◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	<p>Disconnect the relay connector for the reduction motor.</p> 	
2	<p>Remove the screw and remove the reduction motor assembly.</p> 	<ul style="list-style-type: none"> ■ The figure above shows the hook on the connector for the reduction motor assembly. ■ When touching the electrical parts like the limit switch, be sure to conduct the work after discharging static electricity of the human body. It may cause trouble of the PCB.
3	<p>Remove the screw.</p>	
4	<p>Cut the clamp.</p> 	
5	<p>Slide the cover to the right to unfasten the hook.</p> 	

Step	Procedure	Procedure	Points
6	Lift the cover of the reduction motor up slightly to unfasten the upper hook, and remove it.	 <p>(R5676)</p>	
7	Pull the gear out to remove. Remove the screw of the reduction motor.	 <p>(R5677)</p>	
8	Turn the reduction motor assembly over and peel off the tape.	 <p>(R5678)</p>	
9	Remove the reduction motor.		<ul style="list-style-type: none"> ■ The connector of the reduction motor can be disconnected.
10	Unfasten the 2 hooks and remove the limit switch.	 <p>(R13959)</p>	

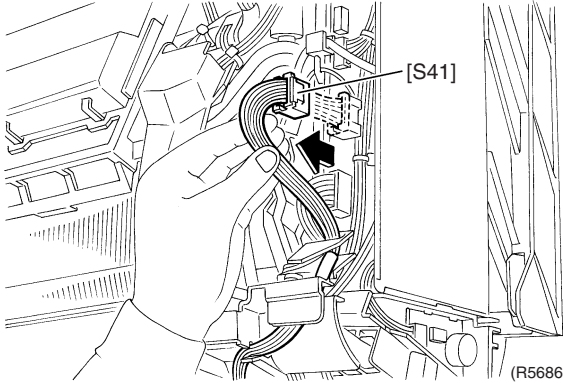
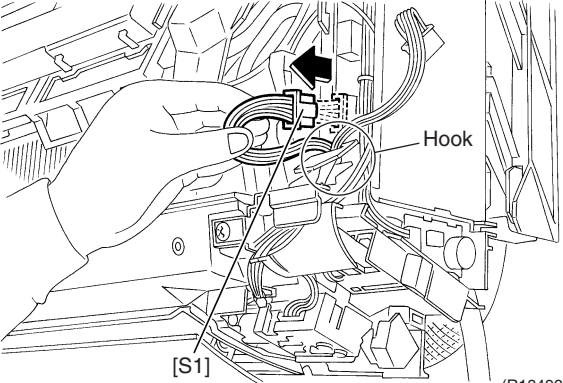
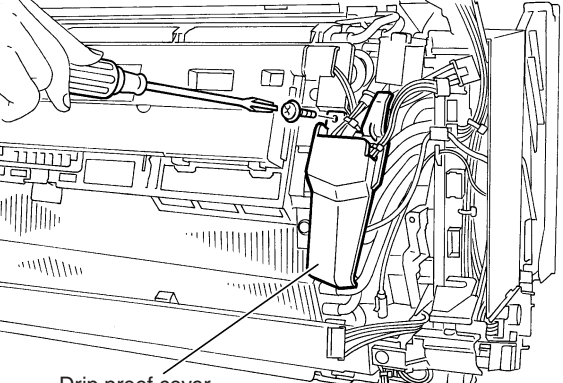
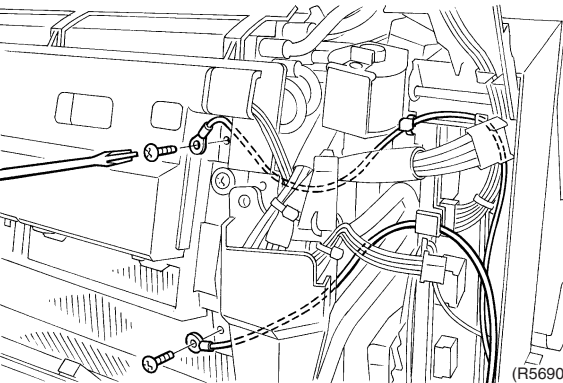
5. Electrical Box

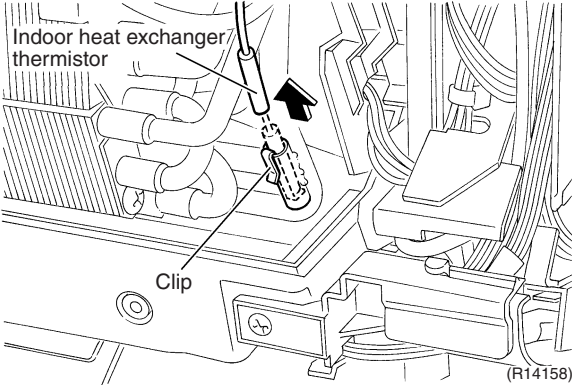
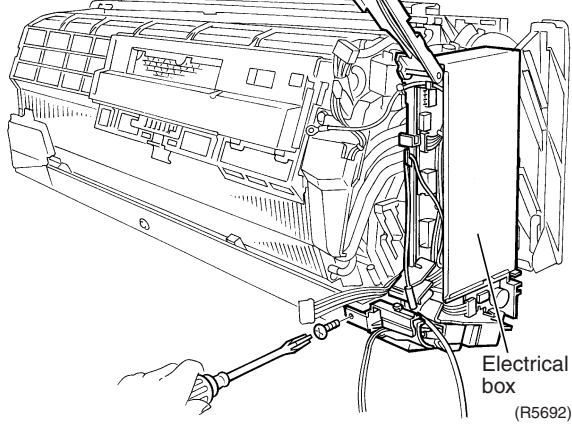
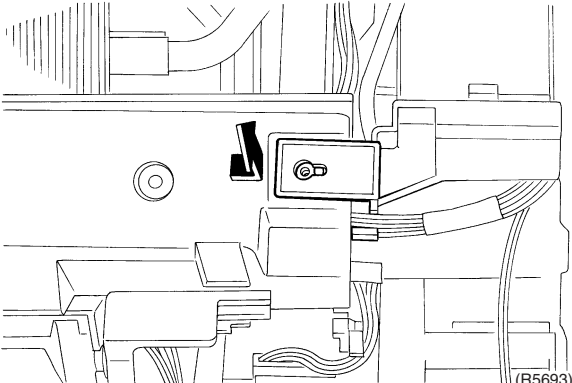
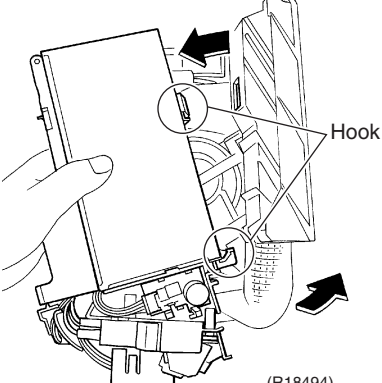


Warning

◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Disconnect the connectors.		
1 Open the electrical box cover.		
2 Remove the screw and remove the wire fixture.		
3 Remove the screws and disconnect the connecting wires.		[S43]: dehumidifying solenoid valve coils
4 Disconnect the connector [S43].		[S52]: streamer unit PCB
5 Disconnect the connector [S52].		

Step	Procedure	Points
6	Disconnect the connector [S41].	 <p>[S41]: swing motors</p> <ul style="list-style-type: none"> ■ The connector [S41] is for both horizontal blades and vertical blades.
7	Disconnect the connector [S1] and release the lead wire from the hook.	 <p>[S1]: fan motor</p>
8	Remove the screw and remove the drip proof cover.	 <p>Drip proof cover</p>
9	Remove the 2 screws of the earth wires.	

Step	Procedure	Points
10	<p>Pull out the indoor heat exchanger thermistor.</p> 	<ul style="list-style-type: none"> Be careful not to lose the clip for the thermistor.
2. Remove the electrical box.		
1	<p>Remove the screw of the electrical box.</p> 	<ul style="list-style-type: none"> When reassembling, insert the upper hook and push slightly, and then make sure to catch the lower hook.
2	<p>Close the electrical box cover and slide the electrical box to unfasten the hook in the key hole.</p> 	
3	<p>Push up the bottom side of the electrical box or push the bottom frame to the back.</p>	
4	<p>Unfasten the upper hook and remove the electrical box.</p> 	

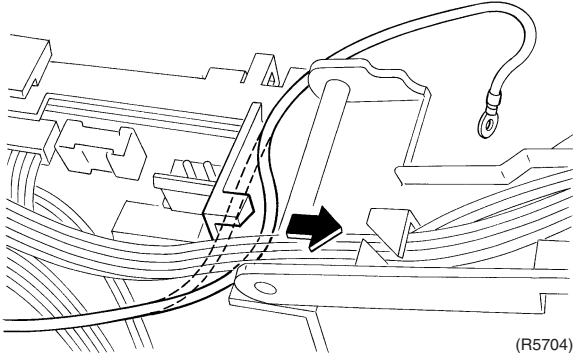
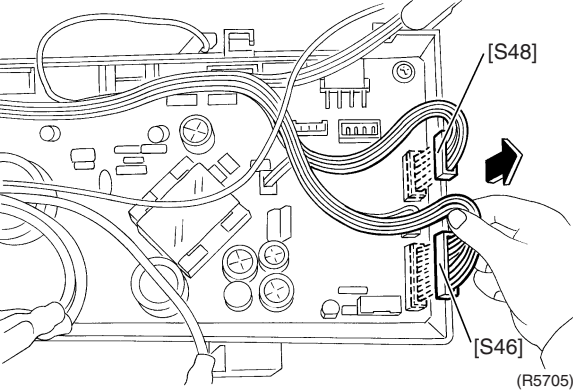
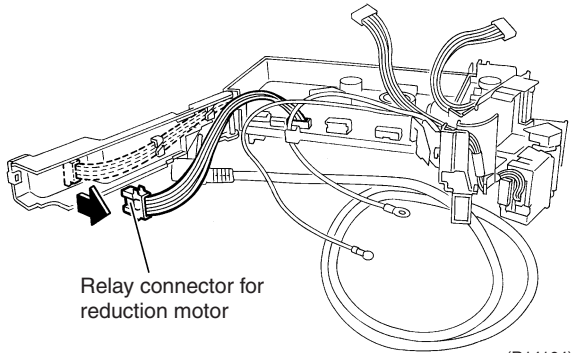
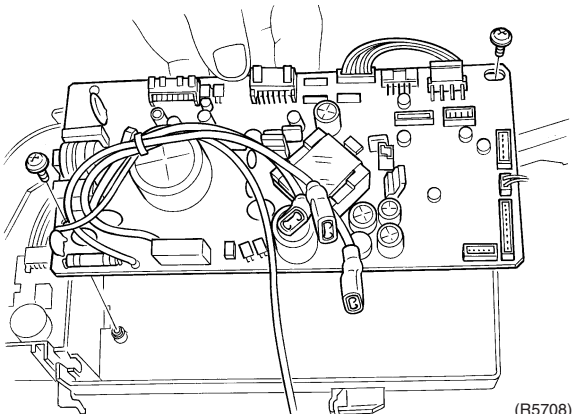
6. PCBs

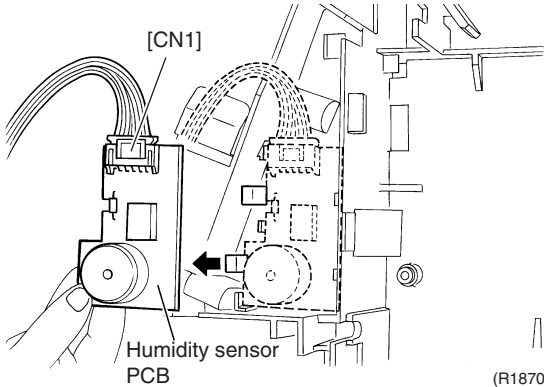
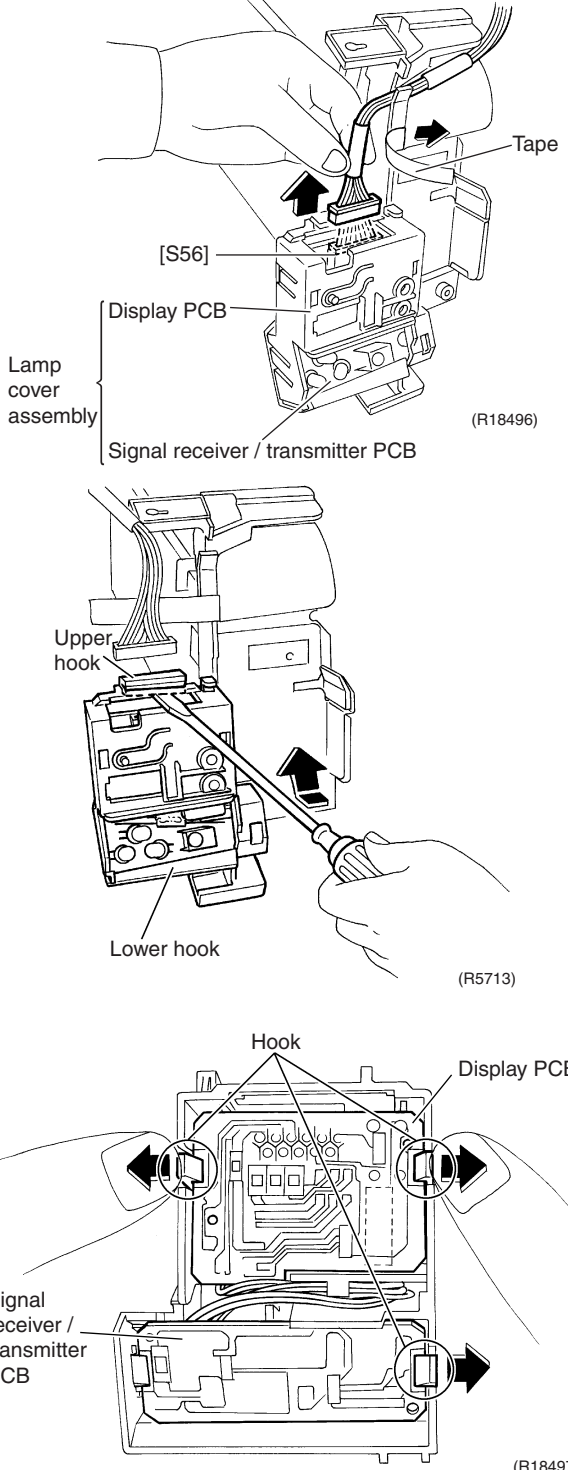


Warning

◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the shield plate</p> <p>1 While opening the shield plate, unfasten the lower hook.</p> <p>2 Lift the shield plate up to unfasten the upper hook and remove it.</p>		
<p>2. Remove the terminal board.</p> <p>1 Remove the screw and pull out the terminal board.</p> <p>2 Disconnect the terminals with pliers.</p>		<p>Black..... (1) power supply White (2) power supply Red (3) signal Green..... earth</p>
<p>3. Remove the control PCB.</p> <p>1 Cut the 3 clamps.</p>		<p>■ When reassembling, fix the harnesses with clamps.</p>

Step	Procedure	Points
2	<p>Release the earth wire from the hook.</p>  <p>(R5704)</p>	
3	<p>Disconnect the connectors [S46] [S48].</p>  <p>(R5705)</p>	<p>[S46]: display PCB [S48]: humidity sensor PCB</p>
4	<p>Pull out the relay connector for the reduction motor from the back side of the electrical box cover.</p>  <p>Relay connector for reduction motor</p> <p>(R14164)</p>	
5	<p>Remove the 2 screws and remove the control PCB.</p>  <p>(R5708)</p>	

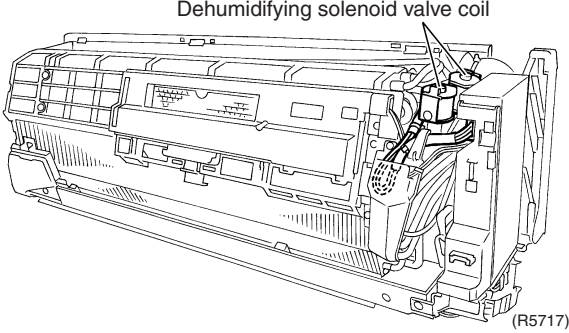
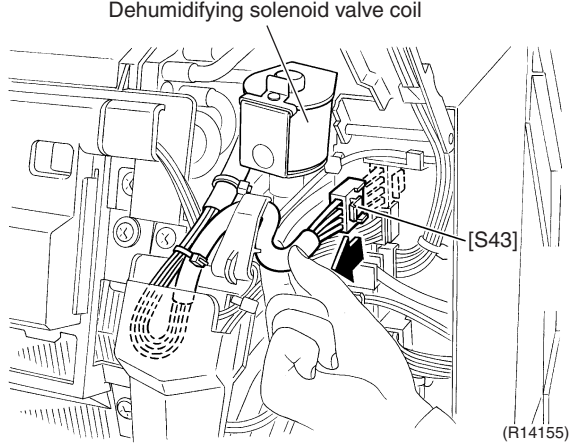
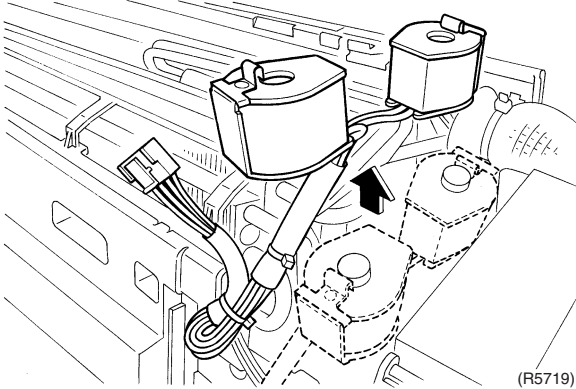
Step	Procedure	Points
<p>4. Remove the humidity sensor PCB.</p> <p>1 Unfasten the hook and pull out the humidity sensor PCB.</p> <p>2 Disconnect the connector [CN1] and remove the humidity sensor PCB.</p>		
<p>5. Remove the display PCB and the signal receiver / transmitter PCB.</p> <p>1 Peel off the tape.</p> <p>2 Disconnect the connector [S56].</p> <p>3 Unfasten the upper hook with a flat screwdriver.</p> <p>4 Unfasten the lower hook and remove the lamp cover assembly.</p> <p>5 Unfasten the 3 hooks and remove the display PCB and the signal receiver / transmitter PCB.</p>		<p>[S56]: control PCB</p> <p>■ The display PCB and the signal receiver / transmitter PCB are united.</p>

7. Dehumidifying Solenoid Valve Coils



Warning

- ◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

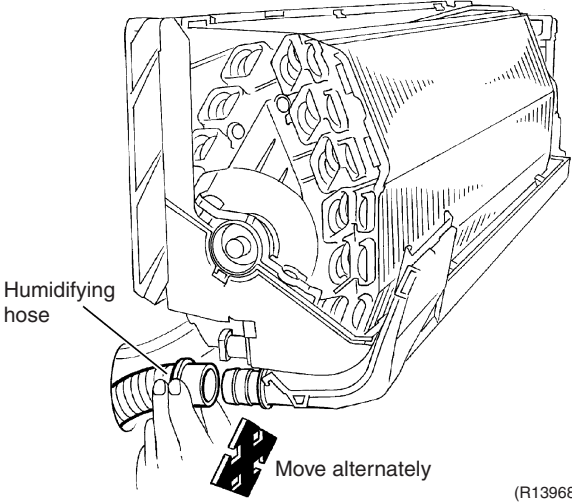
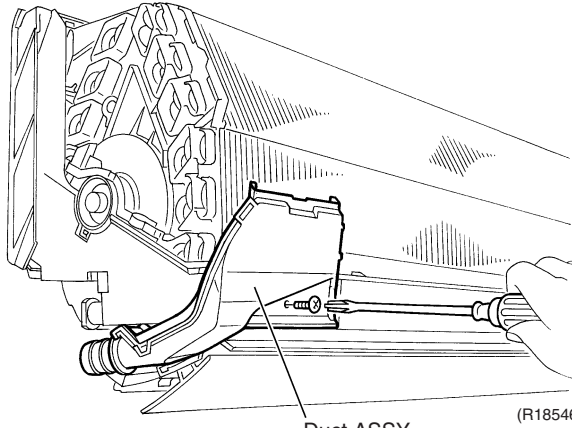
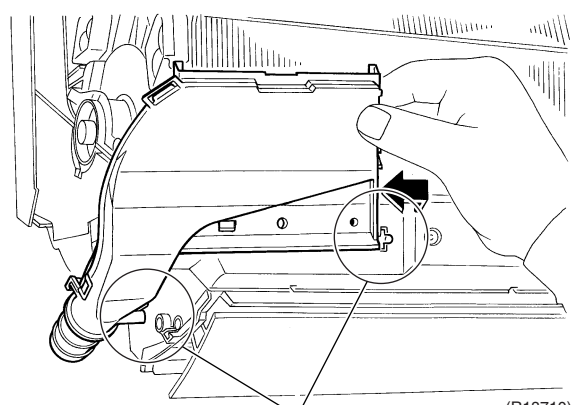
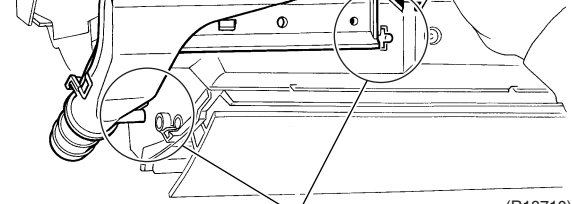
Step	Procedure	Points
1	<p>Disconnect the connector [S43].</p>  <p style="text-align: center;">Dehumidifying solenoid valve coil (R5717)</p>  <p style="text-align: center;">Dehumidifying solenoid valve coil [S43] (R14155)</p>	<p>[S43]: dehumidifying solenoid valve coils</p>
2	<p>Pull out and remove the dehumidifying solenoid valve coils.</p>  <p style="text-align: center;">(R5719)</p>	<p>■ The dehumidifying solenoid valve coils do not need screws.</p>

8. Connecting Duct



Warning

- ◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Detach the humidifying hose from the duct ASSY.  <p>Humidifying hose</p> <p>Move alternately</p> <p>(R13968)</p>	<ul style="list-style-type: none"> ■ Since inside of the humidifying hose has ridges, move the hose up and down to remove.
2	Remove the screw of the duct ASSY.  <p>Duct ASSY</p> <p>(R18546)</p>	
3	Lift the right side to unfasten the projections and slide the duct ASSY to the left.  <p>Projection</p> <p>(R18710)</p>	<ul style="list-style-type: none"> ■ When reassembling, make sure to insert the projection into the fixing hole.
4	Remove the duct ASSY.  <p>Fixing hole</p> <p>(R18702)</p>	

9. Drain Hose



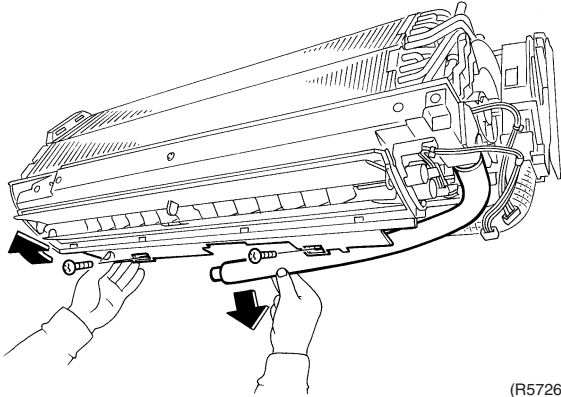
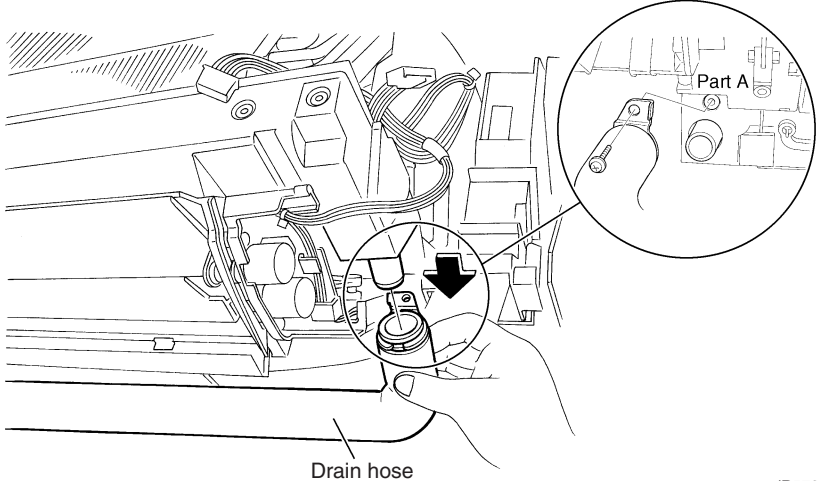
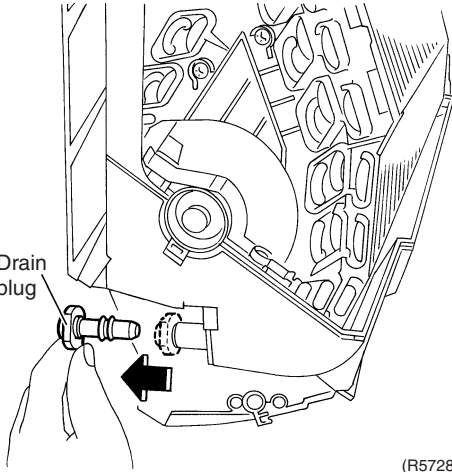
Warning

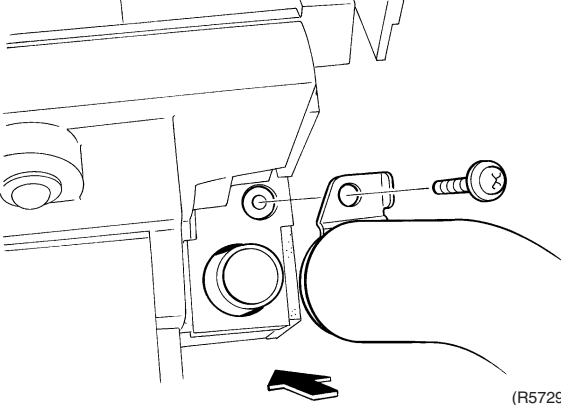
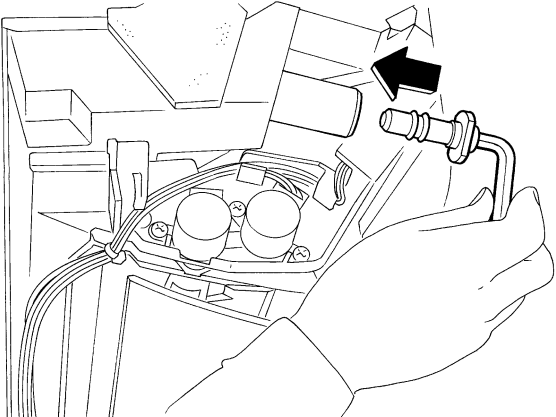
- ◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.



Caution

- ◆ Do not push the drain plug with a sharp device like a screwdriver. (The drain plug can be damaged and that causes leakage of water.)

Step	Procedure	Points
<p>1. Remove the drain hose.</p> <p>1 Remove the 2 screws which fix the indoor unit to the installation plate.</p> <p>2 Lift the indoor unit slightly and pull out the drain hose.</p> <p>3 Remove the screw on the back side and pull out the drain hose.</p>	 <p>(R5726)</p>  <p>Drain hose</p> <p>(R5727)</p>	<ul style="list-style-type: none"> ■ Cover the drain hose with plastic bags or the like so as the remaining drain will not wet the floor. ■ Part A is fixed by a screw from the back side. When replacing the drain hose, make sure to tighten the screw as there is no gap between the heat insulator and the drain hose.
<p>2. How to conduct piping to the left side</p> <p>1 Detach the drain plug on the left side.</p>	 <p>Drain plug</p> <p>(R5728)</p>	

Step	Procedure	Points
2	<p data-bbox="212 219 448 342">Insert the drain hose removed in the previous step and tighten the screw.</p>  <p data-bbox="1018 658 1078 674">(R5729)</p>	<ul data-bbox="1102 219 1417 275" style="list-style-type: none">■ Make sure that the drain hose is inserted firmly.
3	<p data-bbox="212 701 459 824">Insert the detached drain plug on the right side with a hexagonal wrench (4 mm).</p>  <p data-bbox="1018 1167 1078 1182">(R5730)</p>	

10.Swing Motors



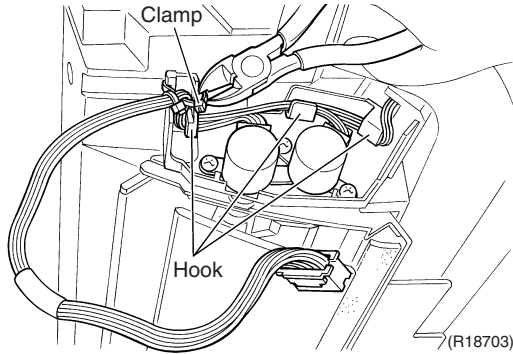
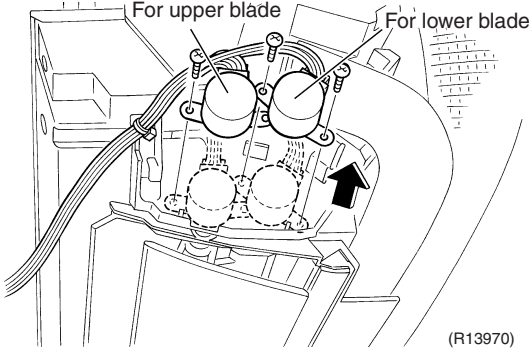
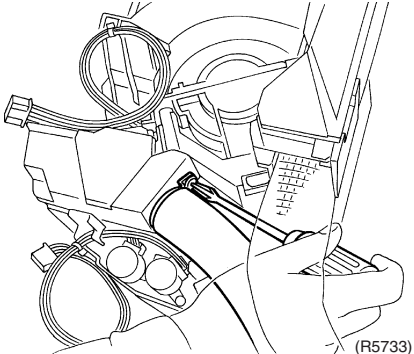
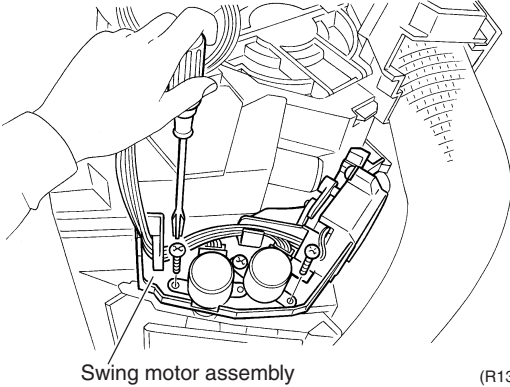
Warning

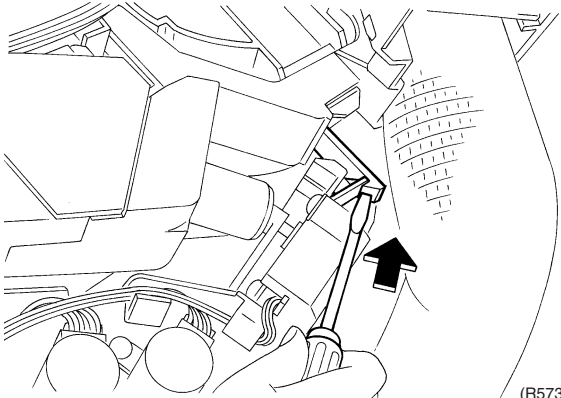
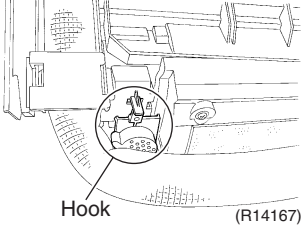
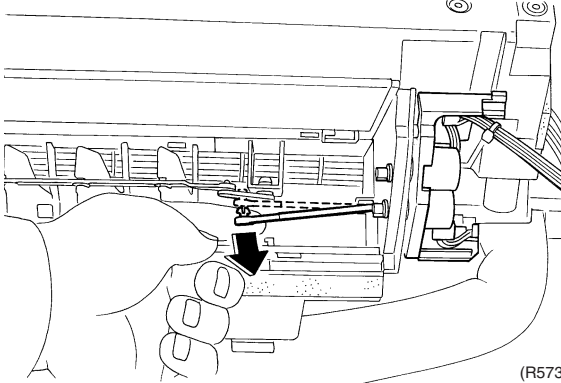
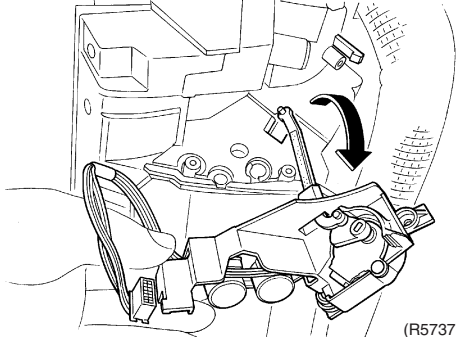
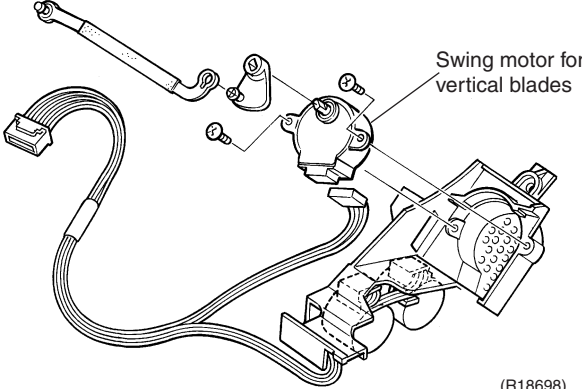
- ◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.



Caution

- ◆ When reassembling, do not confuse the installing order of the 2 motors for horizontal blades and the colors of the connectors. If you set the connectors or motors opposite, the horizontal blades do not move smoothly or noise may be heard.

Step	Procedure	Points
<p>1. Remove the swing motors for horizontal blades.</p> <p>1 Cut the clamp.</p> <p>2 Release the lead wire for the swing motors from the 3 hooks.</p> <p>3 Remove the 3 screws and remove the 2 swing motors.</p>	 	<p>■ Reassembling order</p> <p>(1) Set the swing motor for the upper blade first. (connector: green)</p> <p>(2) Then, set the swing motor for the lower blade. (connector: red)</p> <p>(3) Fix both swing motors with a screw.</p>
<p>2. Remove the swing motor for vertical blades.</p> <p>1 Remove the screw of the drain hose.</p> <p>2 Remove the 2 screws of the swing motor assembly.</p>	 	

Step	Procedure	Procedure	Points
3	Unfasten the upper hook of the swing motor assembly with a flat screwdriver.	 <p>(R5735)</p>	 <p>Hook (R14167)</p>
4	Unfasten the hook of the connecting shaft for vertical blades.	 <p>(R5736)</p>	
5	Remove the swing motor assembly.	 <p>(R5737)</p>	
6	Remove the 2 screws and remove the swing motor for vertical blades.	 <p>Swing motor for vertical blades</p> <p>(R18698)</p>	

11. Indoor Heat Exchanger



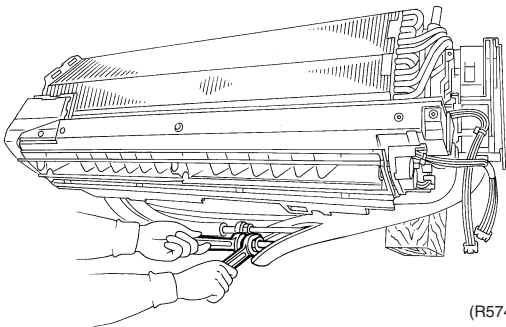
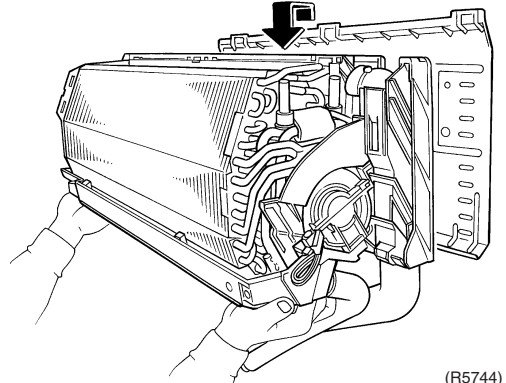
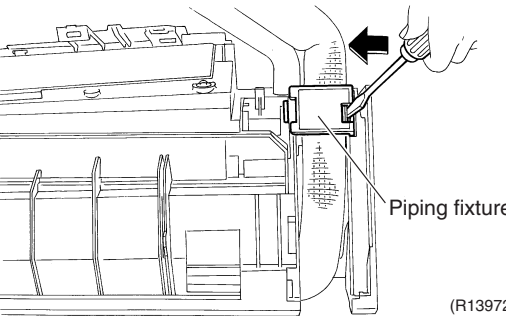
Warning

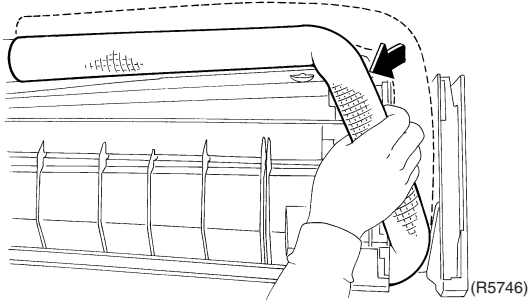
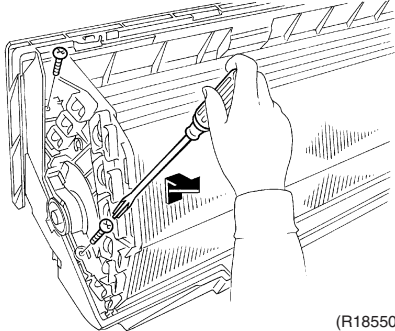
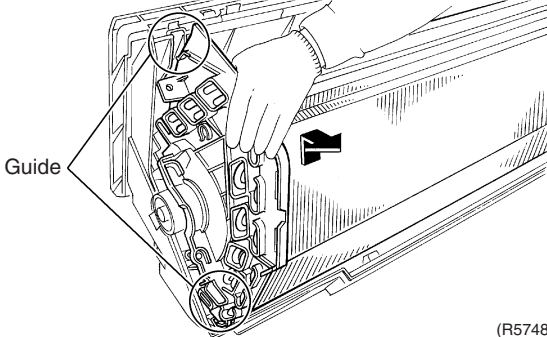
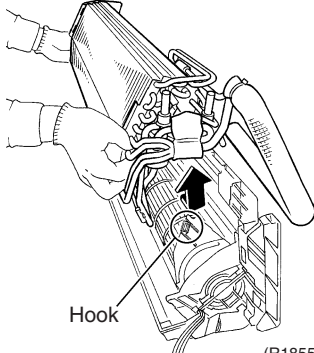
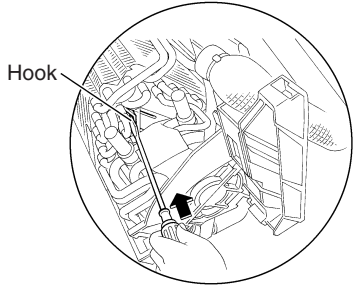
- ◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.
- ◆ In pump-down work, be sure to stop the compressor before disconnecting the refrigerant pipe. If the refrigerant pipe is disconnected with the compressor operating and the stop valve open, air may be sucked in and may generate an over-pressure in refrigeration cycle, thus resulting in pipe rupture or accidental injury.
- ◆ When removing or reinstalling the indoor heat exchanger, be sure to wear protective gloves or wrap the indoor heat exchanger with cloths. (You may be injured by the fins.)



Caution

- ◆ Be sure to conduct pump down operation before disassembling the refrigerant pipe.
- ◆ If the refrigerant leaks, repair the spot of leaking, then collect all refrigerant from the unit. After conducting vacuum drying, recharge proper amount of refrigerant.
- ◆ From the viewpoint of global environmental protection, make sure to use a vacuum pump for air purging.

Step	Procedure	Points
<p>1 Disconnect the flare nut for gas piping.</p> <p>2 Disconnect the flare nut for liquid piping.</p>	 <p style="text-align: right;">(R5741)</p>	<ul style="list-style-type: none"> ■ Hold the indoor unit up with a piece of wood. ■ Place a plastic sheet under the drain pan to prevent from wetting the floor with remaining drain. ■ If the drain hose is embedded in the wall, disconnect the drain hose beforehand.
<p>3 Remove the indoor unit from the installation plate.</p>	 <p style="text-align: right;">(R5744)</p>	<ul style="list-style-type: none"> ■ Carry out the removal works with 2 wrenches. ■ When the pipings are disconnected, protect both the openings of pipe and unit from entering of moisture.
<p>4 Unfasten the hook of the piping fixture at the back of the indoor unit and pull out the pipe.</p>	 <p style="text-align: right;">(R13972)</p>	

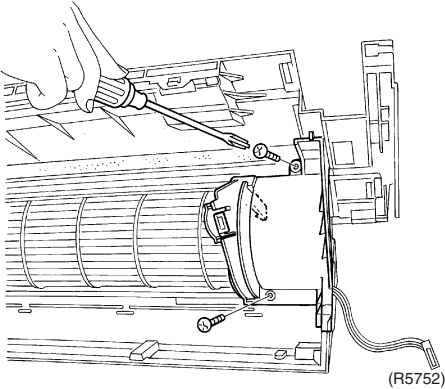
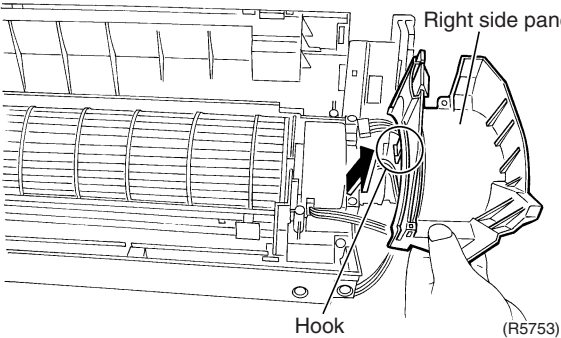
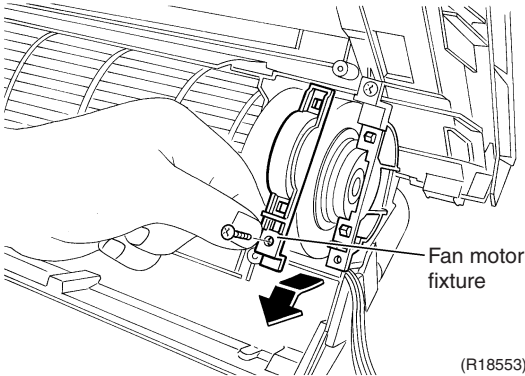
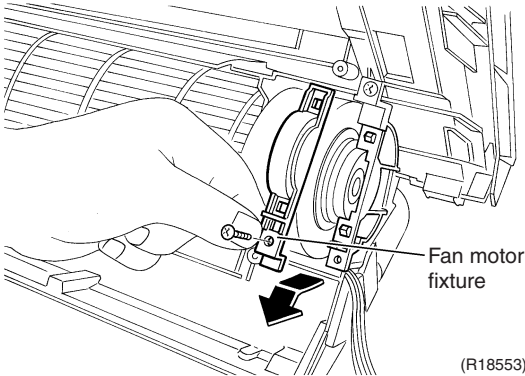
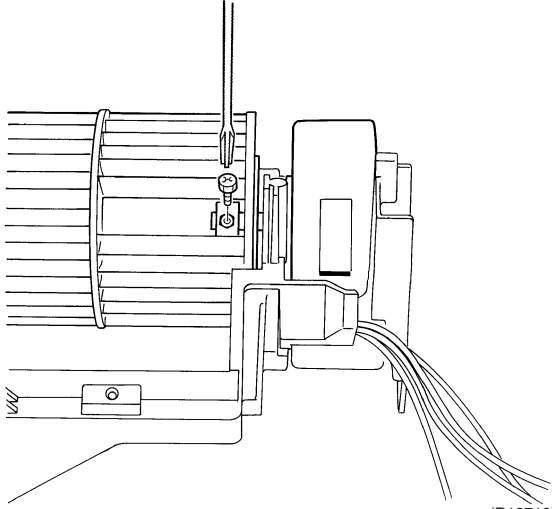
Step		Procedure	Points
5	Slightly widen the auxiliary piping.		
6	Remove the 2 screws on the left.		
7	Lift the left side of the indoor heat exchanger, and pull out.		
8	Unfasten the hook through the gap of the pipings.		 <p data-bbox="1098 2033 1453 2130"> ■ Be careful so the solenoid valves will not be caught in the hook. </p>

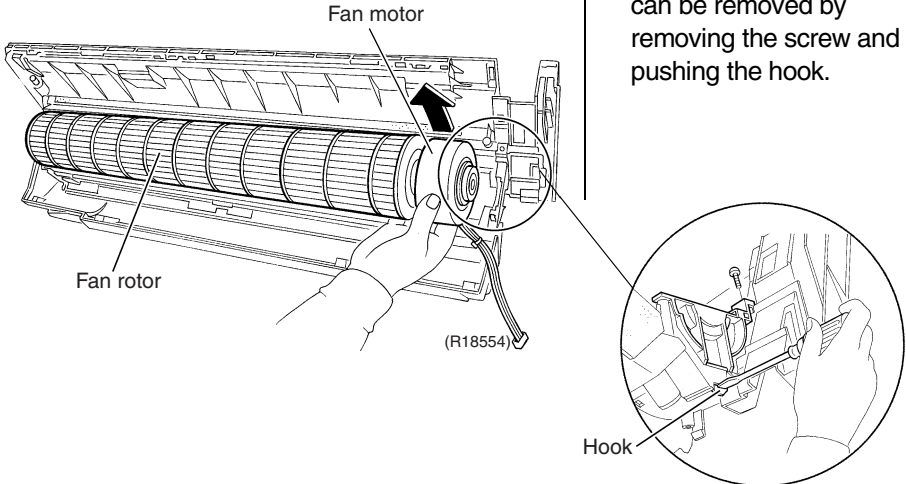
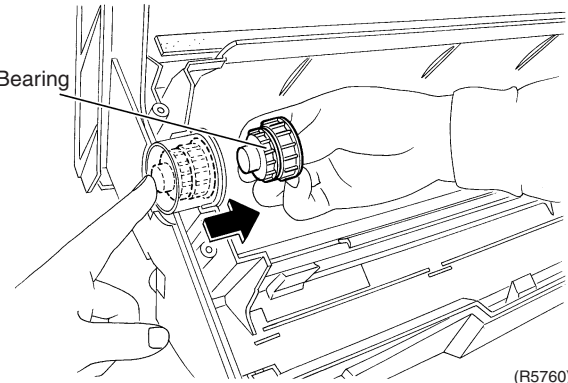
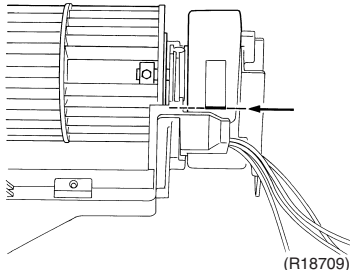
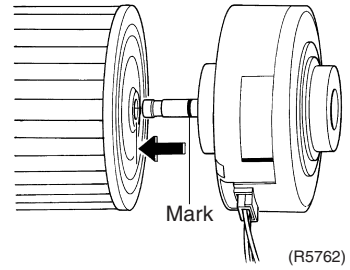
12.Fan Rotor / Fan Motor



Warning

◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the 2 screws of the right side panel. 	
2	Unfasten the far side hook while pulling out and remove the right side panel. 	
3	Remove the screw of the fan motor fixture. 	
4	Unfasten the 2 hooks and remove the fan motor fixture. 	
5	Loosen the fixing screw. 	

Step	Procedure	Points
6	<p>Remove the fan motor and fan rotor.</p> 	<ul style="list-style-type: none"> ■ The fan motor fixture (lower) can be removed by removing the screw and pushing the hook.
7	<p>The bearing is made of rubber. Push it inward firmly and remove it.</p> 	<ul style="list-style-type: none"> ■ When reassembling, align the mark on the shaft.  

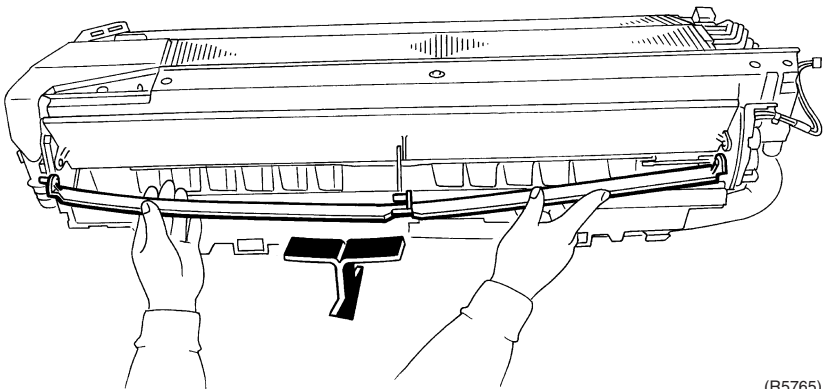
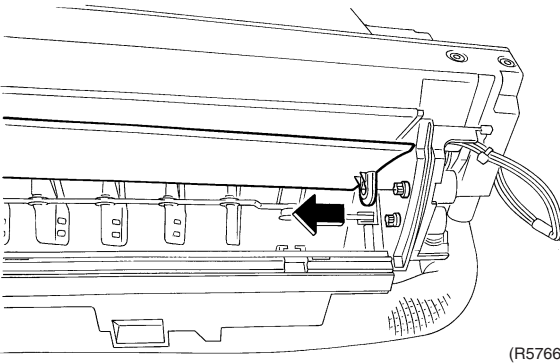
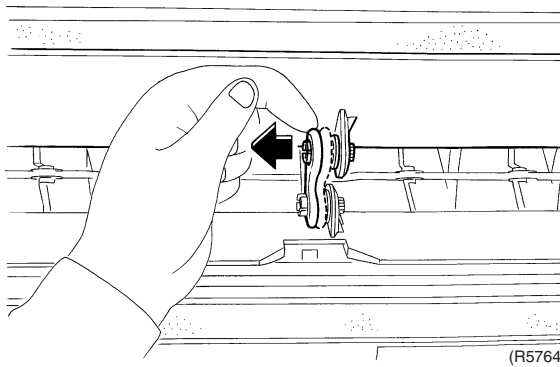
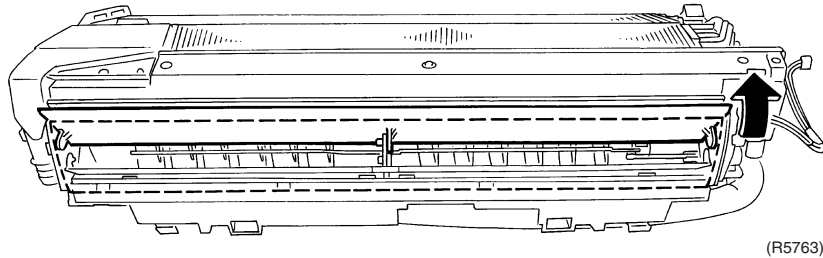
13.Horizontal Blades / Vertical Blades



Warning

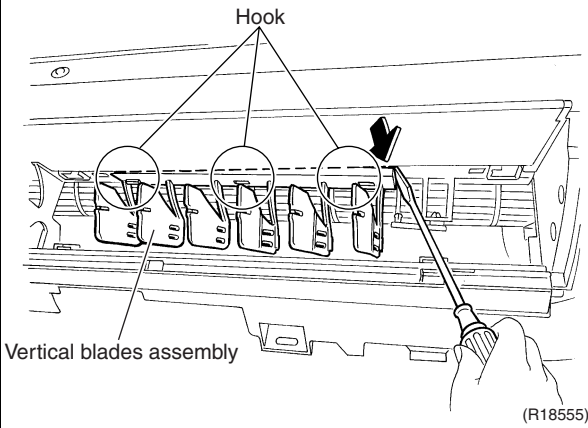
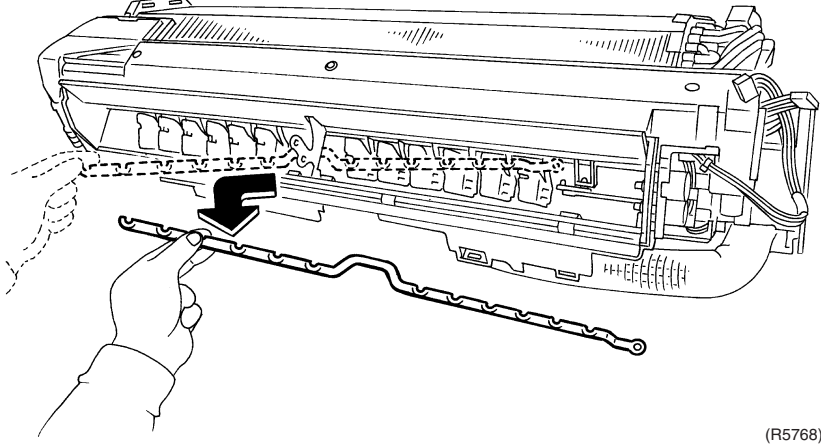
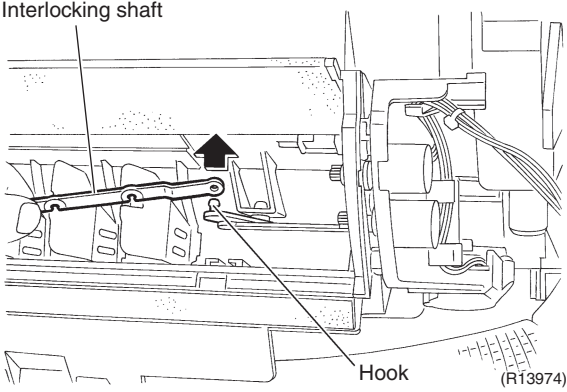
◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the horizontal blades.		
1	Open the horizontal blade (large).	
2	Unfasten the center shaft for the horizontal blade (large).	
3	Unfasten the left shaft while bending the horizontal blade (large) slightly.	
4	Unfasten the right shaft and remove the horizontal blade (large).	
5	Remove the horizontal blade (small) in the same way.	



- When reassembling the horizontal blades, be careful not to put the large and small blades in the wrong position.
- There is a key alignment at the right side.

Step	Procedure	Points
2.	Remove the vertical blades.	<ul style="list-style-type: none"> Remove the fan guards.
1	Unfasten the hook of the interlocking shaft.	
2	Remove the interlocking shaft.	
3	Unfasten the 3 hooks of the vertical blades with a flat screwdriver.	
4	Remove the vertical blades assembly.	



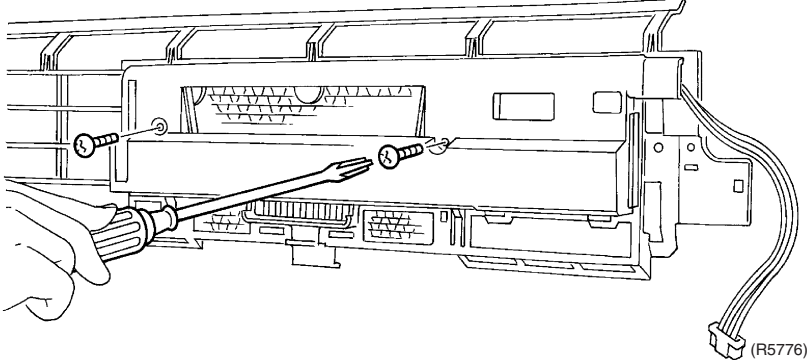
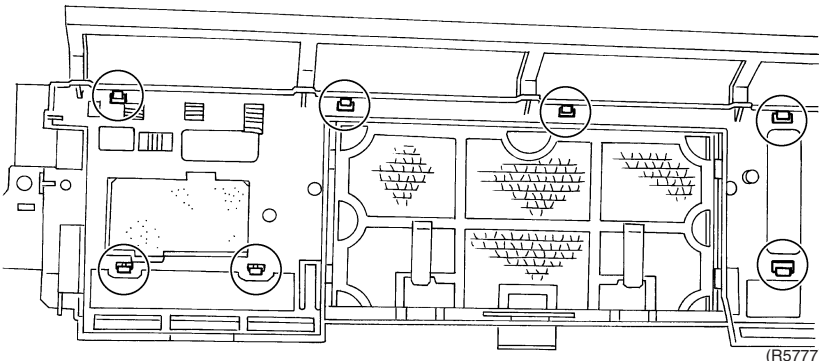
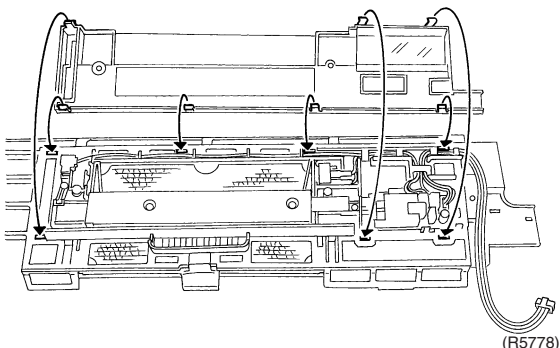
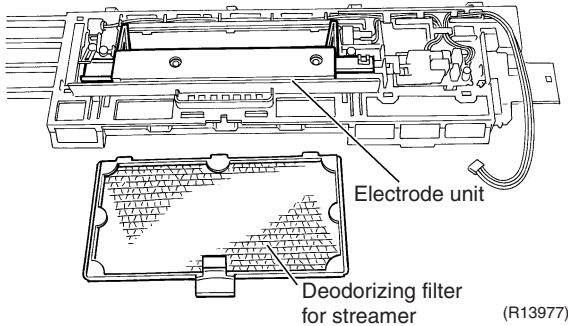
14.Streamer Unit

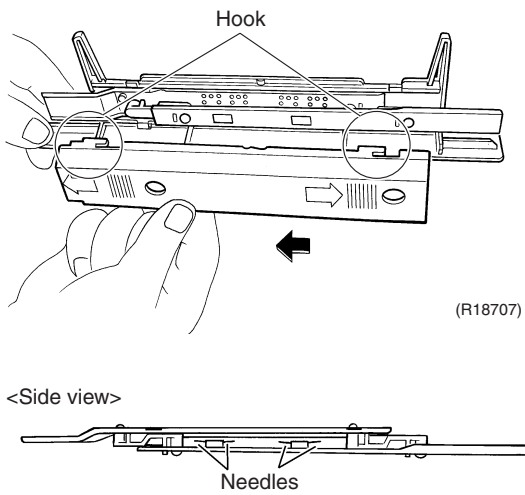
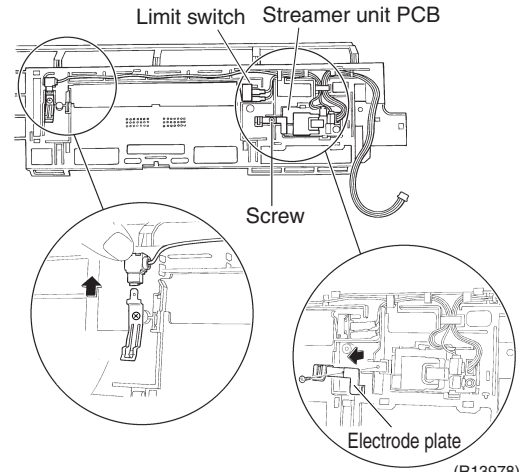
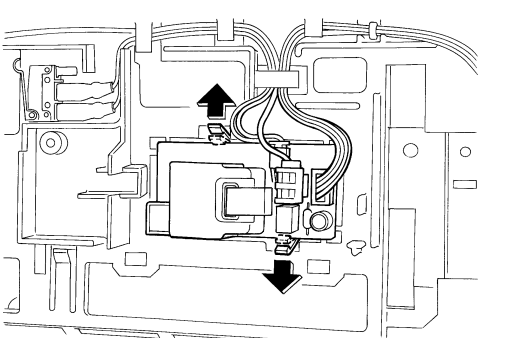
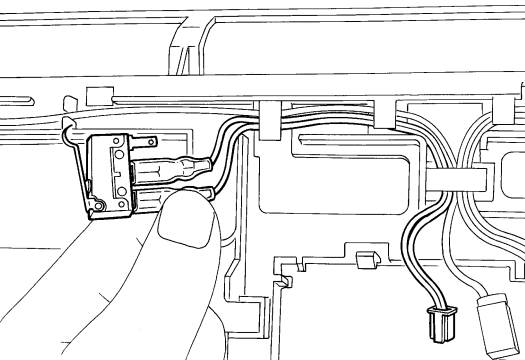


Warning

◆ Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1.	Remove the streamer unit.	
1	Open the electrical box cover and disconnect the connector for the streamer unit PCB [S52].	
2	Remove the screw of the streamer unit.	
3	Release the wire harness for the dehumidifying solenoid valve coils from the hook of the drip proof cover.	
4	Slide the streamer unit to the right.	
5	Remove the streamer unit.	
6	Cut the clamp and remove the screw of the drip proof cover.	

Step	Procedure	Points
2.	Remove the cover of the streamer unit.	
1	Remove the 2 screws of the cover.	
2	Turn over the streamer unit and unfasten the 7 hooks.	
3	Remove the cover of the streamer unit.	
3.	Remove the deodorizing filter for streamer and the electrode unit.	
1	Remove the deodorizing filter for streamer and the electrode unit.	

Step	Procedure	Points
2	<p>Slide the cover of the electrode unit to the left and remove it.</p> 	<ul style="list-style-type: none"> When reassembling, slide the cover to the right.
4. Remove the streamer unit PCB.	<p>1 Remove the screw of the electrode plate with a small screwdriver.</p>  <p>2 Unfasten the 2 hooks and remove the streamer unit PCB.</p>  <p>3 Disconnect the connectors and remove the limit switch.</p> 	

Revision History

Month / Year	Version	Revised contents
02 / 2013	Si041260	First edition

Warning



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved