




REMOVAL PROCEDURE



S E R V I C E M A N U A L

7.1 kW Class

-  Indoor Unit
-  Inverter
-  Floor Standing Type



Service Manual Removal Procedure

Indoor Unit

●Heat Pump
FVXS71FV2CW
FVXS71FV2CN

Table of Contents

1. Removal of Air Filter.....	2
2. Removal of Suction Grille.....	4
3. Removal of Control PCB	5
4. Removal of Piping Cover	9
5. Removal of Electrical Box	10
6. Removal of Fan Rotor / Fan Motor.....	11
7. Removal of Front Panel	14
8. Removal of Display PCB.....	16
9. Removal of Indoor Heat Exchanger	17



Note: ♦ The illustrations may be slightly different depending on the model.

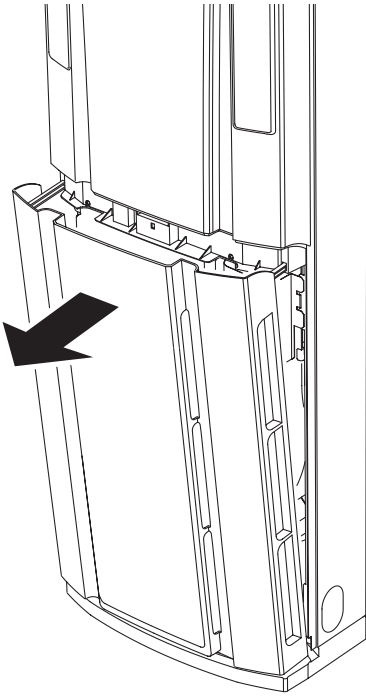
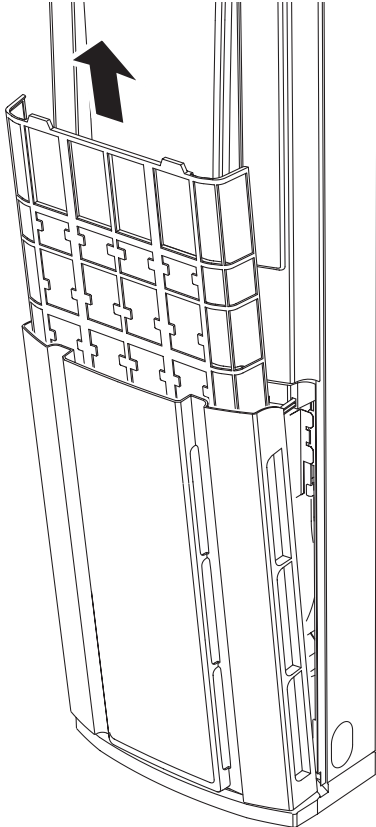
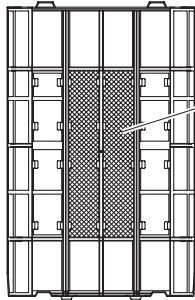
1. Removal of Air Filter

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Features	<p>(R4618)</p>	<p>■ If the system gets in trouble, an error code appears on the temperature display.</p>
	<p>■ Display</p> <p>(R4619)</p>	

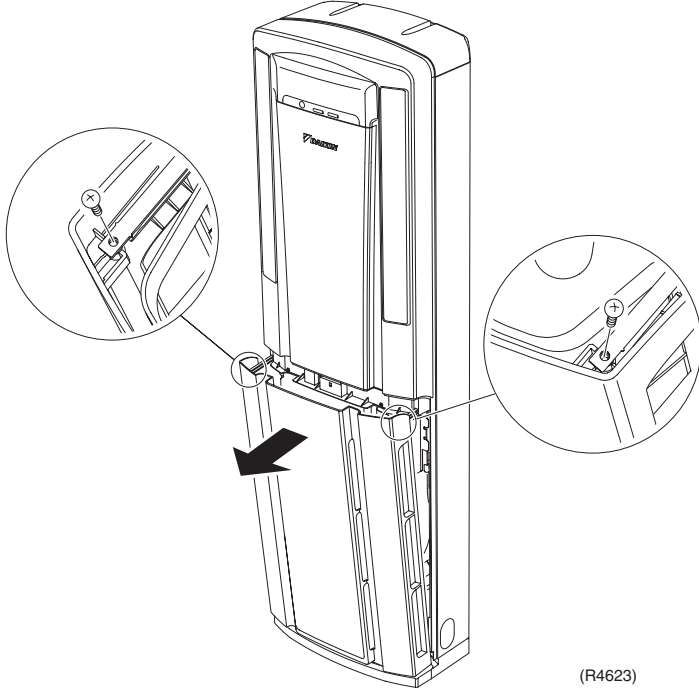
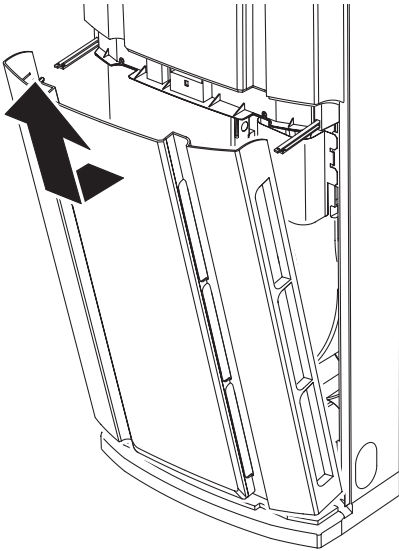
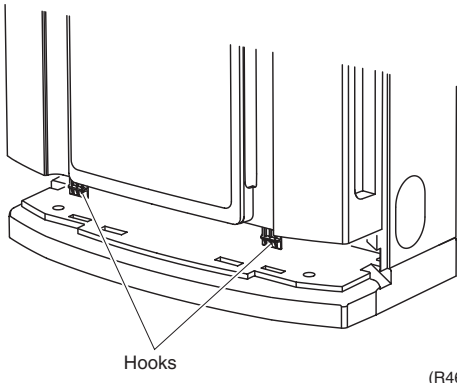
Step	Procedure	Points
2. Remove the air filter.		
1	<p>Put your fingers on the right and left air inlets, and open the suction grille.</p>  <p>(R4620)</p>	<p>Warning : Make sure the vertical blades are closed. Otherwise the air filter cannot be pulled out. (These blades shut themselves when the system stops.)</p> <p>Note : Do not force the suction grille open. It may come off, and you may get injured by the internal fan or the unit may fall down.</p>
2	<p>Grip the top knob, and draw up and out the air filter.</p>  <p>(R4621)</p>	<p>■ The Titanium apatite photocatalytic air purifying filters are located behind the air filter.</p>  <p>(R4622)</p>

2. Removal of Suction Grille

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

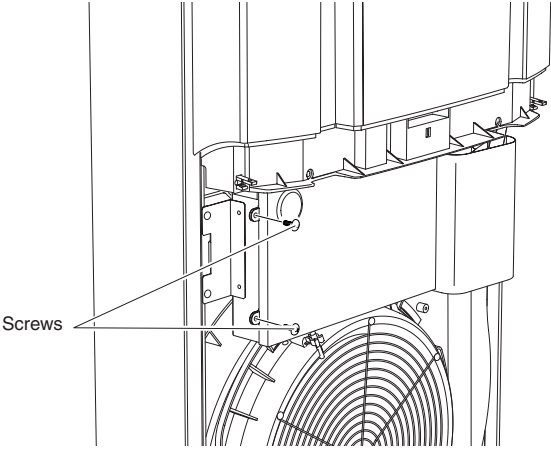
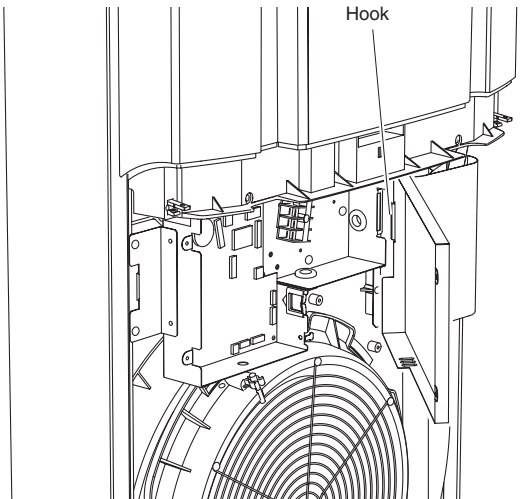
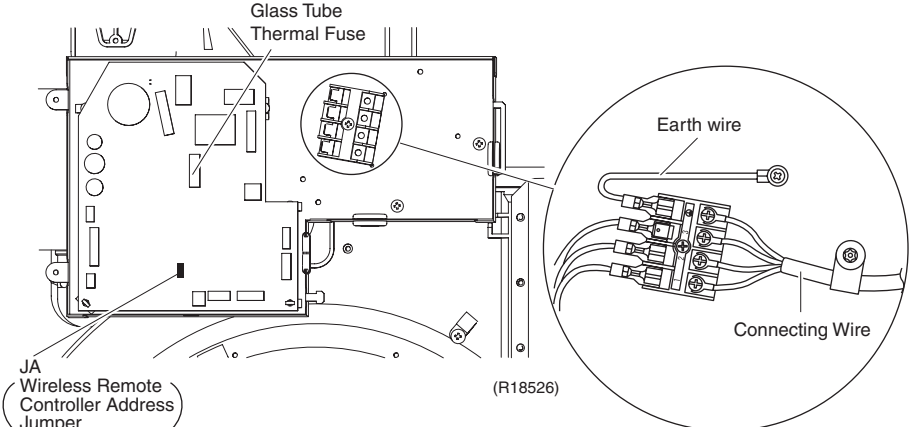
Step	Procedure	Points
<p>1. Remove the suction grille.</p> <p>1 Open the suction grille, and loosen the 2 screws.</p> <p>2 Tilt the suction grille deep toward yourself first and then lift it out of position. (Unfasten the 2 hooks at the bottom of the suction grille.)</p>	 <p>(R4623)</p>  <p>(R4624)</p>  <p>Hooks</p> <p>(R4625)</p>	<p>■ When placing the suction grille back in position, fit the hooks at the bottom first.</p>

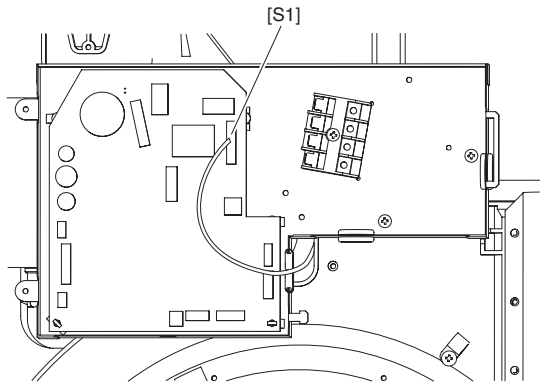
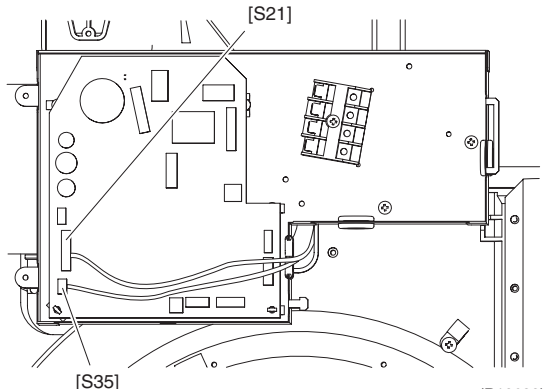
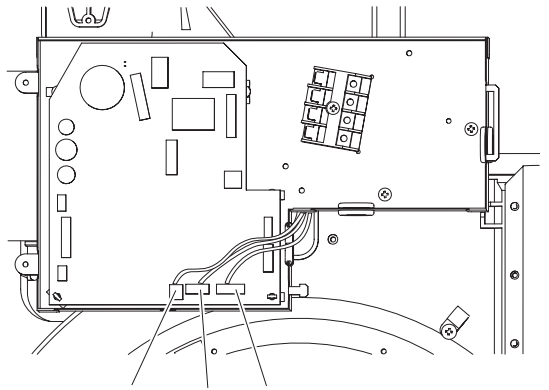
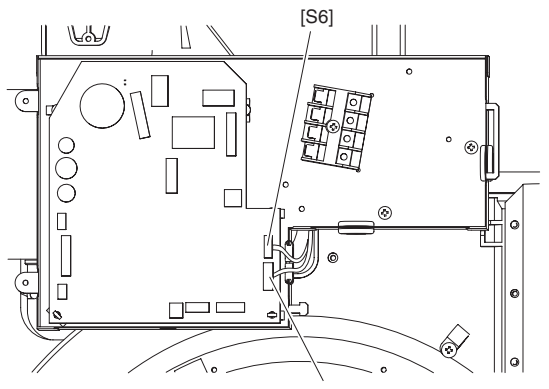
3. Removal of Control PCB

Procedure

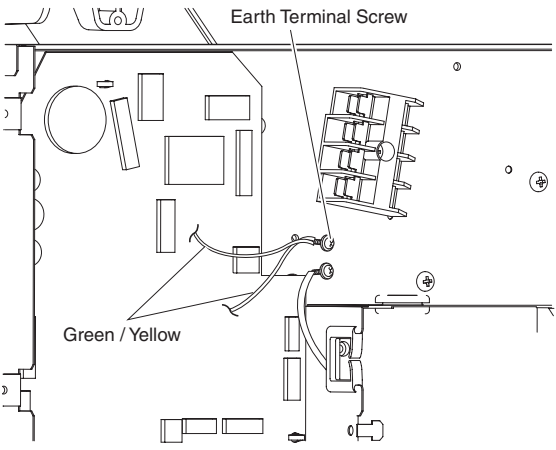
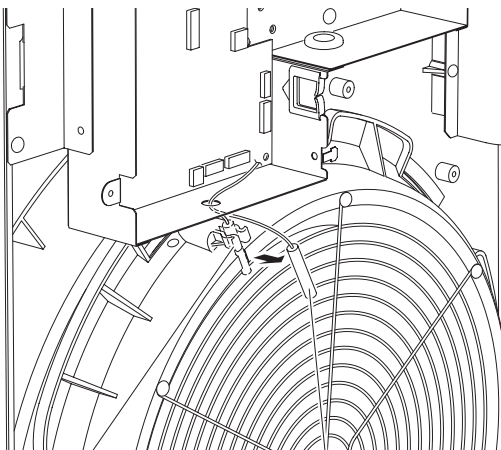
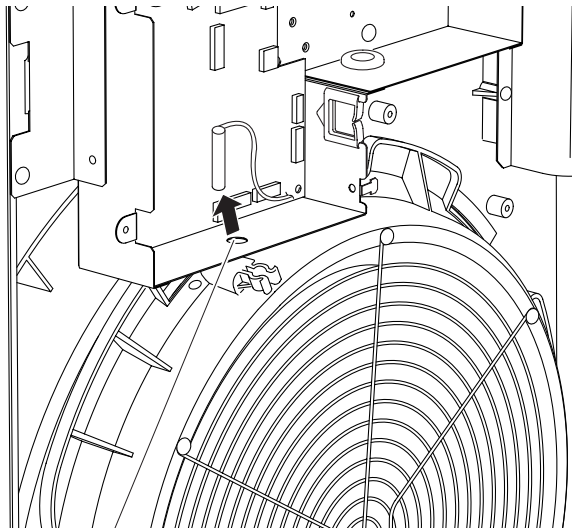


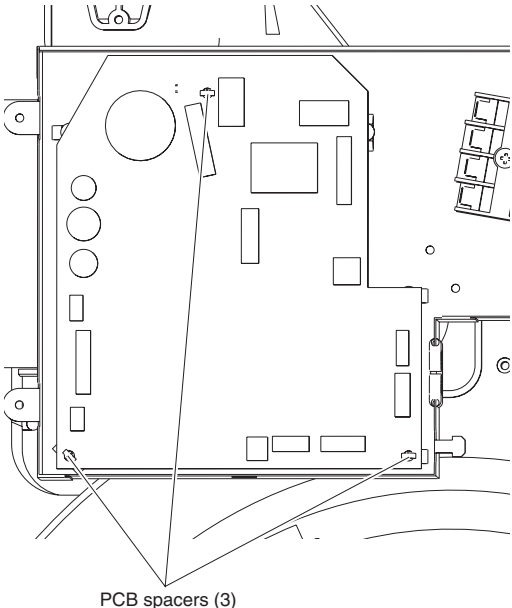
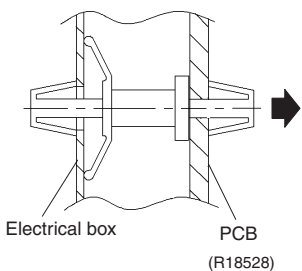
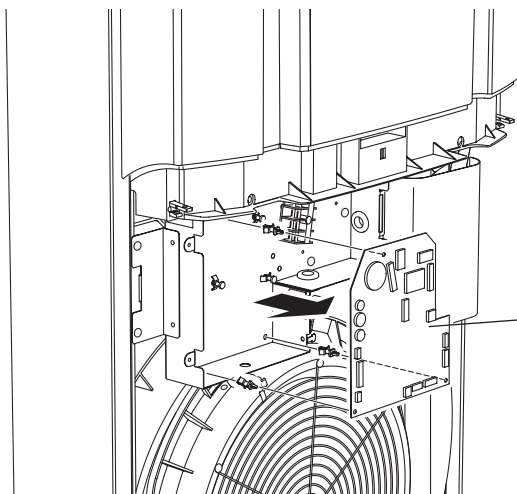
Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the control PCB.	<p>■ Remove the suction grille.</p>	
1	<p>Remove the 2 screws (top and bottom on the left) off the electrical box cover.</p>	 <p>(R4626)</p>
2	<p>Open the electrical box cover, and undo the right-hand hook.</p>	 <p>(R4627)</p>
3	<p>The figure at right shows the control PCB. Disconnect the harnesses from the terminal strip board.</p>	<p>■ Terminal strip board for power supply 1-black 2-white 3-red ⊕-green/yellow</p>  <p>(R18526)</p>

Step	Procedure	Points
4	Disconnect the connector for fan motor [S1].	 <p>(R18637)</p>
5	Disconnect the connectors [S21] [S35].	 <p>(R18638)</p>
6	Disconnect the connectors [S26] [S28] and the connector for indoor heat exchanger thermistor [S32].	 <p>(R18639)</p>
7	Disconnect the connectors for swing motor [S6] [S8].	 <p>(R18640)</p>

■ Connector
[S6] : White
[S8] : Red

Step	Procedure	Points
8	<p>Remove the screw and disconnect the earth terminal.</p>  <p>(R10046)</p>	
9	<p>Release the room temperature thermistor from the holder.</p>  <p>Holder Room Temperature Thermistor</p> <p>(R4634)</p>	
10	<p>Pull out the room temperature thermistor from the hole of the electrical box.</p>  <p>Hole</p> <p>(R4635)</p>	

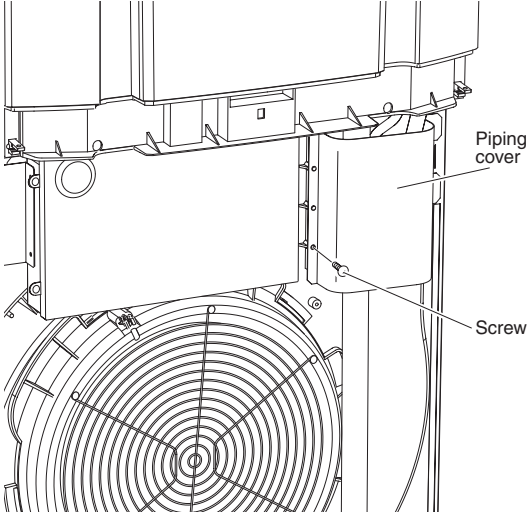
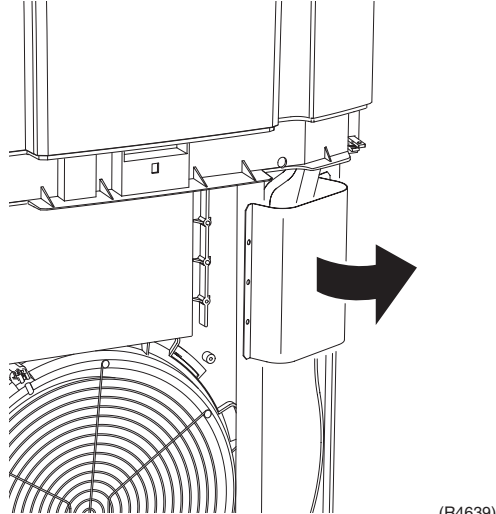
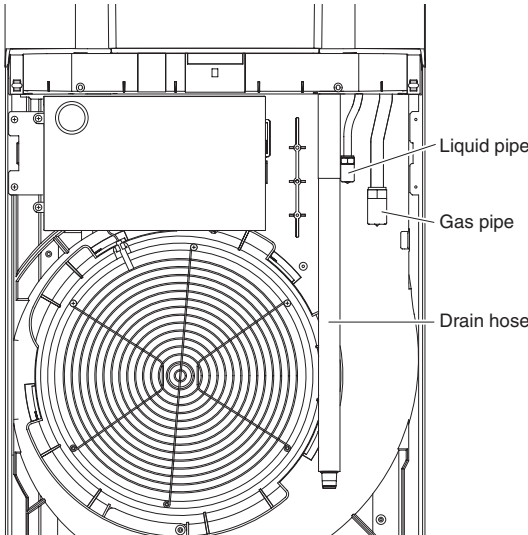
Step	Procedure	Points
11	<p>Pull the 3 PCB spacers out of the control PCB.</p>  <p>PCB spacers (3)</p> <p>(R18527)</p>	<ul style="list-style-type: none"> ■ Preferably use long-nose pliers to easily draw out the PCB spacers.  <p>Electrical box</p> <p>PCB (R18528)</p> <p>Section view</p>
12	<p>Remove the control PCB.</p>  <p>Control PCB</p> <p>(R4637)</p>	

4. Removal of Piping Cover

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Detach the piping cover.		
■ Remove the suction grille.		
1	<p>Remove the screw and detach the piping cover.</p>  <p>(R18530)</p>  <p>(R4639)</p>	
2	<p>The figure at right shows the pipe connections.</p>  <p>(R18529)</p>	<p>■ The drain hose and the drain pan are integrated and inseparable.</p>

5. Removal of Electrical Box

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

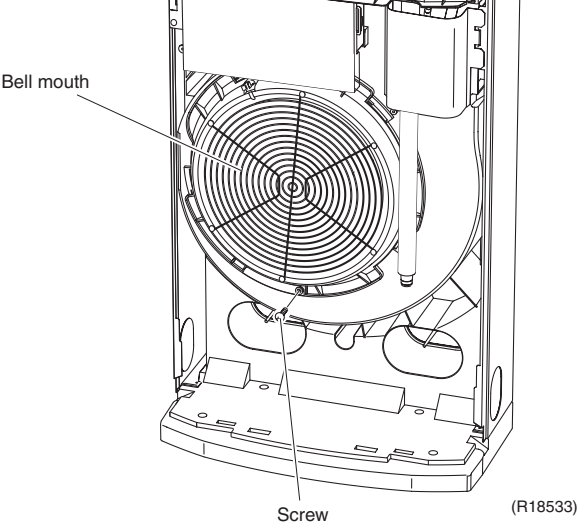
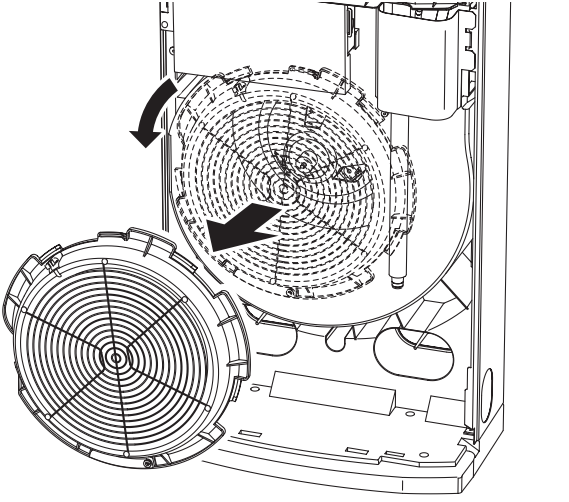
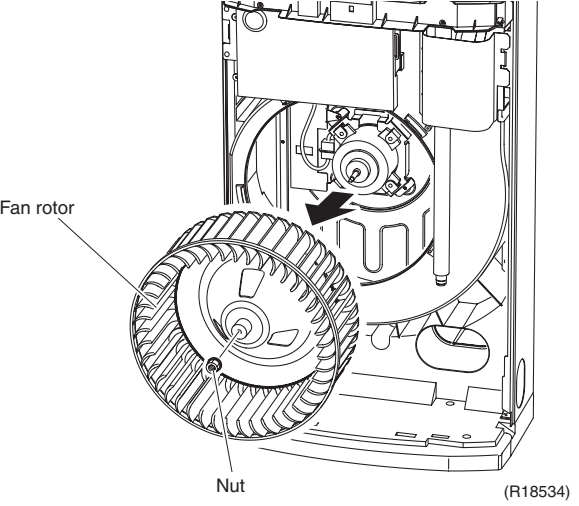
Step	Procedure	Points
<p>1. Remove the electrical box.</p> <p>■ Remove the electrical box cover.</p>	<p>(R18531)</p>	
<p>1 Remove the screws and disconnect the earth terminals (green / yellow-striped wire harness).</p>	<p>(R18532)</p>	<ul style="list-style-type: none"> ■ The wire harnesses of the connectors are tied up with the clamp. ■ The room temperature thermistor is fixed to the holder.
<p>2 Release the room temperature thermistor. Disconnect the connectors and terminal strip for power supply, all from the power supply / control PCB.</p>	<p>(R18523)</p>	
<p>3 Remove the 4 fixing screws off the electrical box.</p>	<p>(R2464)</p>	
<p>4 Pull out the electrical box toward yourself.</p>		

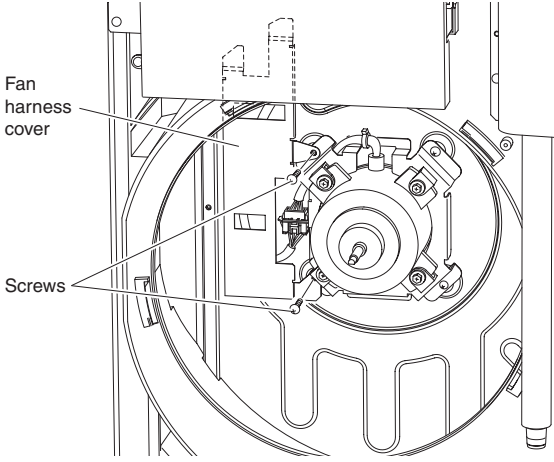
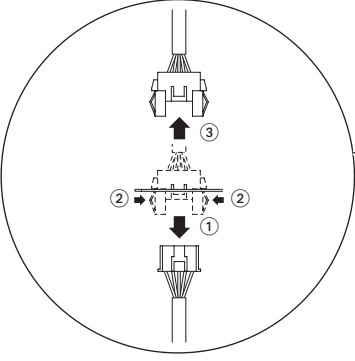
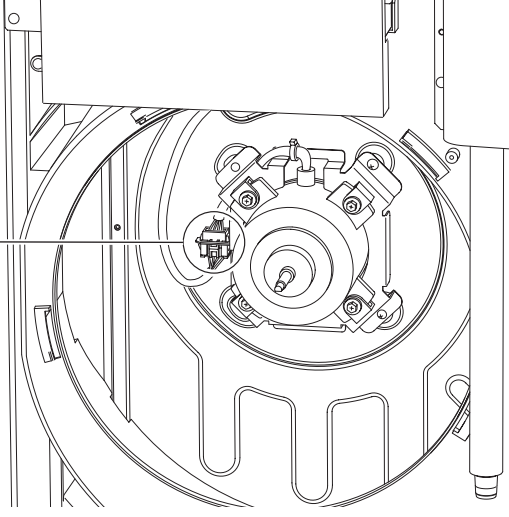
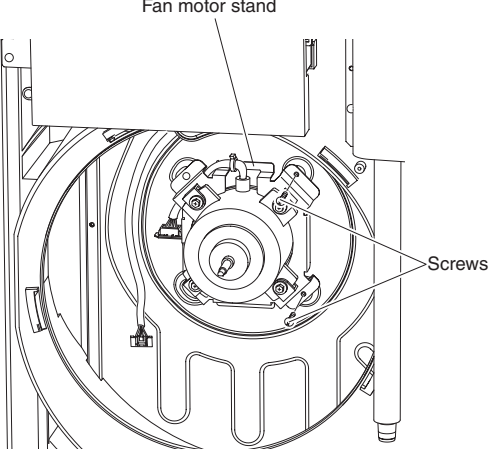
6. Removal of Fan Rotor / Fan Motor

Procedure

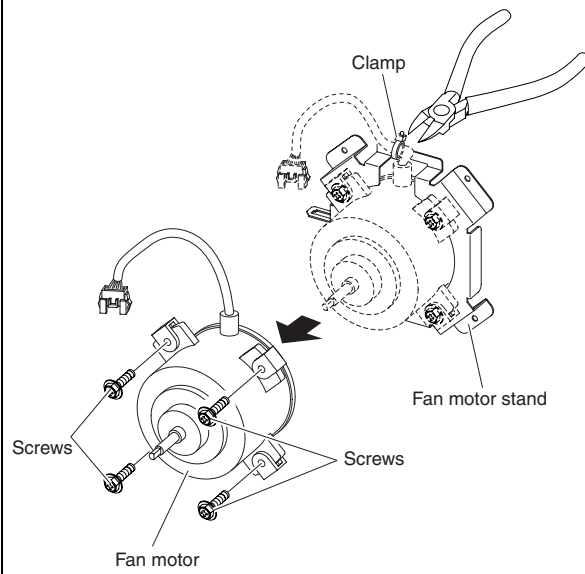


Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Detach the fan rotor. ■ Remove the suction grille, electrical box and piping fixture.		
1 Remove the screw of the bell mouth.		
2 Turn the bell mouth to the left and pull it out.		
3 Remove the nut and pull out the fan rotor.		

Step	Procedure	Points
2. Detach the fan motor.		
1	<p>Remove the 2 screws on the left side and remove the fan harness cover.</p>  <p>(R18535)</p>	<p><Attention in the fan motor installation> Before you tighten screws, be sure that the rubber vibration isolators (front, back) of the fan motor firmly fit into the both holes of the installation board and fan motor cover when you install a fan motor.</p>
2	<p>① Disconnect the relay harness. ② Pinch the both sides of the spring. ③ Pull out the connector from the plate.</p>   <p>(R4647)</p>	
3	<p>Remove the 2 screws on the right side and remove the fan motor stand. The left 2 screws, which tighten the fan harness cover, have been already removed at procedure 1.</p>  <p>(R18536)</p>	

Step	Procedure	Points
4 5	Cut the clamp and release the harness from the fan motor stand. Remove the 4 screws and remove the fan motor from the stand.	



(R18537)

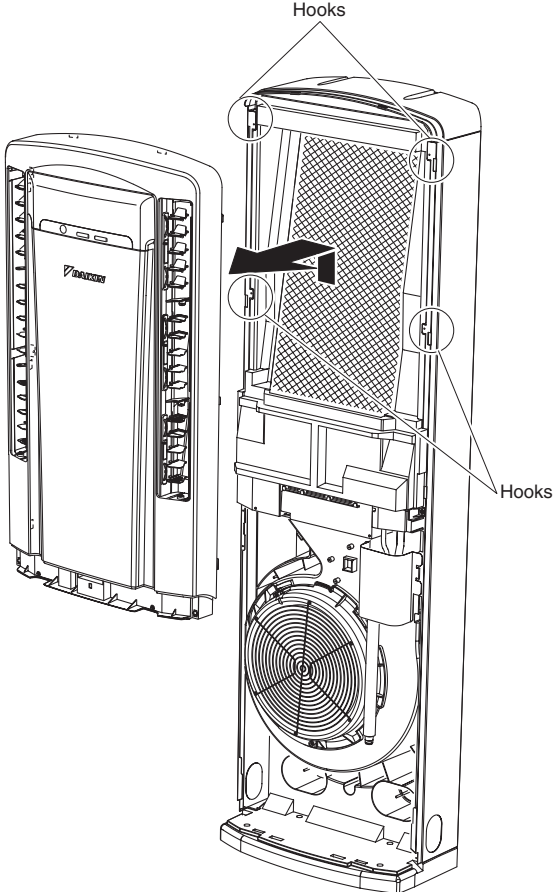
7. Removal of Front Panel

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Detach the front panel.		
1	Release the 2 hooks in the middle of the vertical blade.	<p style="text-align: right;">(R18538)</p>
2	Release the upper shaft of the vertical blade and lift the blade up to remove.	
3	Remove either vertical blades in the same way.	
4	Remove the 4 screw covers.	<p style="text-align: right;">(R4651)</p>
5	Remove the 6 screws.	
6	Release the harness from the hook.	

Step	Procedure	Points
7	<p data-bbox="201 215 472 309">Lift the front panel up to undo the 4 hooks and pull it out.</p>  <p data-bbox="1007 1167 1070 1189">(R4652)</p>	

8. Removal of Display PCB

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the display PCB.		<ul style="list-style-type: none"> ■ Take out the display PCB from behind the front panel.
<ul style="list-style-type: none"> ■ Detach the front panel. 		<ul style="list-style-type: none"> ■ The screws have washers. When reassembling, be sure to attach the washers.
<ol style="list-style-type: none"> 1 Remove the 6 cylindrical heat insulators. 2 Remove the 8 screws. 3 Remove the heat insulator. 		
		<p style="text-align: right;">(R10048)</p>
4 Release the 4 hooks and pull out the PCB case assembly.		
		<p style="text-align: right;">(R18539)</p>
5 Release the 7 hooks and remove the back cover.		
6 Peel off the filament tapes.		
7 Release the 6 hooks and pull out the display PCB from the display case.		
		<p style="text-align: right;">(R18540)</p>

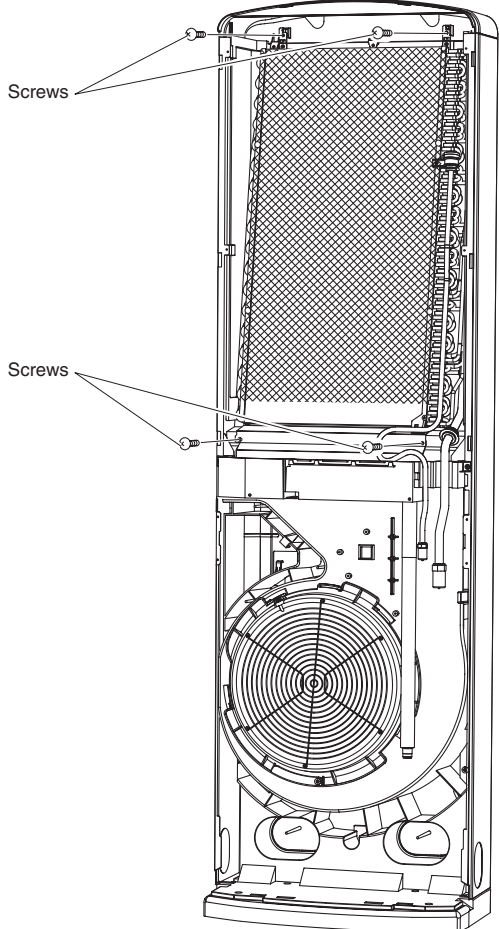
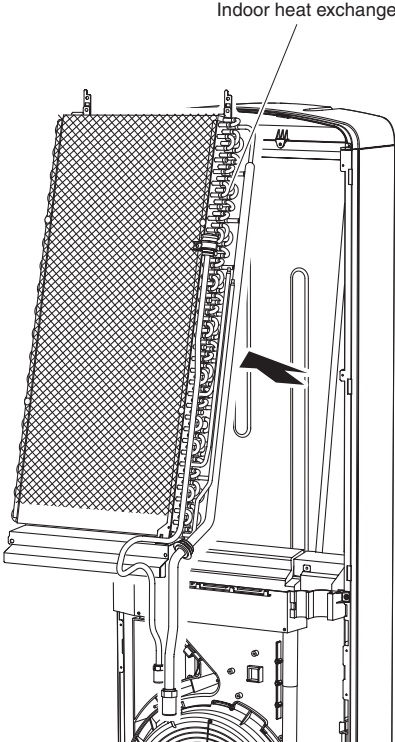
9. Removal of Indoor Heat Exchanger

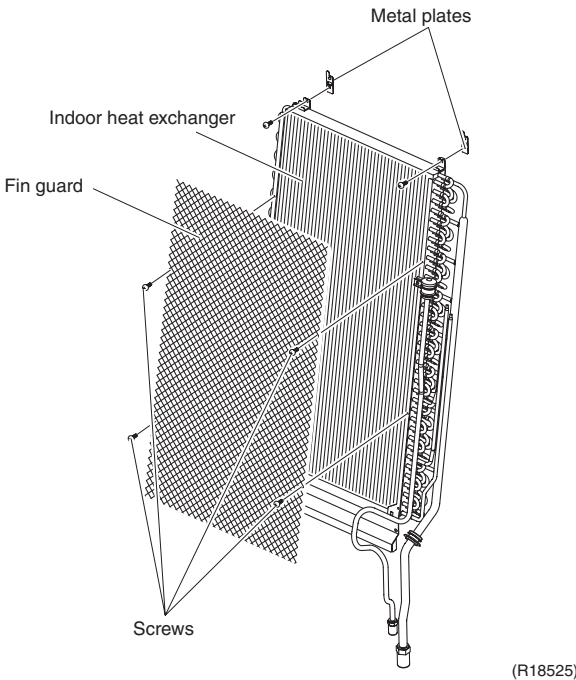
Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Detach the indoor heat exchanger.</p> <ul style="list-style-type: none"> ■ Detach the front panel. ■ Detach the piping cover. ■ Detach the electrical box. ■ Release the harnesses from the hook behind the electrical box. 	<p>Air outlet guide</p> <p>(R18541)</p>	
<p>1 Pull out the air outlet guide.</p> <p>2 Remove the screw and remove the piping cover.</p> <p>3 Remove the piping fixture.</p> <p>4 Release the harnesses (indoor heat exchanger thermistor, earth wire) from the ditch of the drain pan.</p>	<p>Harnesses</p> <p>Piping fixture</p> <p>Piping cover</p> <p>(R10254)</p>	

Step	Procedure	Points
<p>4 Remove the 4 screws of the indoor heat exchanger.</p>	 <p>(R4658)</p>	
<p>5 Lift up and remove the indoor heat exchanger.</p>	 <p>(R18524)</p>	

Step	Procedure	Points
6 7	<p data-bbox="201 215 472 275">Loosen the 4 screws to remove the fin guard.</p> <p data-bbox="201 282 472 443">When replacing indoor heat exchanger, detach the metal plates and attach them to the new one.</p> <div data-bbox="491 259 1070 936"><p>The diagram illustrates the assembly of an indoor heat exchanger. It shows a central indoor heat exchanger unit with a fin guard attached to its front. The fin guard is held in place by four screws. Metal plates are shown being attached to the top of the heat exchanger unit. The diagram is labeled with 'Metal plates', 'Indoor heat exchanger', 'Fin guard', and 'Screws'. A reference code '(R18525)' is located at the bottom right of the diagram area.</p></div>	

Revision History

Month / Year	Version	Revised contents
06 / 2013	Si06-862	First edition

Warning



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved