




REMOVAL PROCEDURE



SERVICE
MANUAL

S E R V I C E M A N U A L

6.0 kW Class

-  Outdoor Unit
-  Non-Inverter
-  Pair Type



Service Manual Removal Procedure

Outdoor Unit

Applicable Models

●Cooling Only

RE60KV1

RE60KV14

RE60LV16

RE60LV1V

RE60MV16

Table of Contents

1. Removal of Outer Panels	2
2. Removal of Outdoor Fan / Fan Motor	7
3. Removal of Sound Blanket.....	10
4. Removal of Electrical Component ASSY	11
5. Removal of Capillary Tube	13
6. Removal of Compressor ASSY	14



Note: ♦ The illustrations may be slightly different depending on the model.

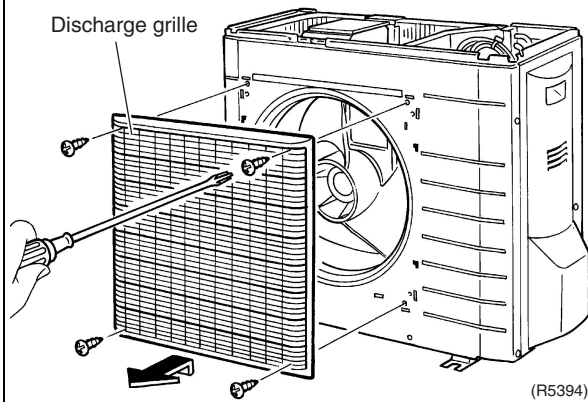
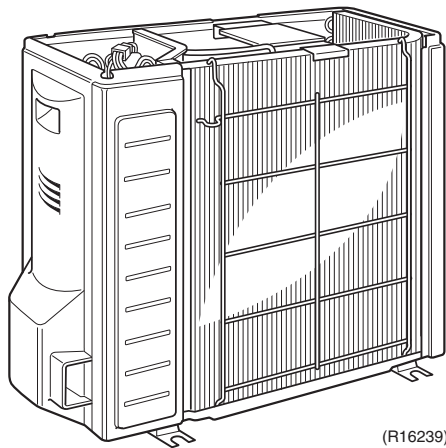
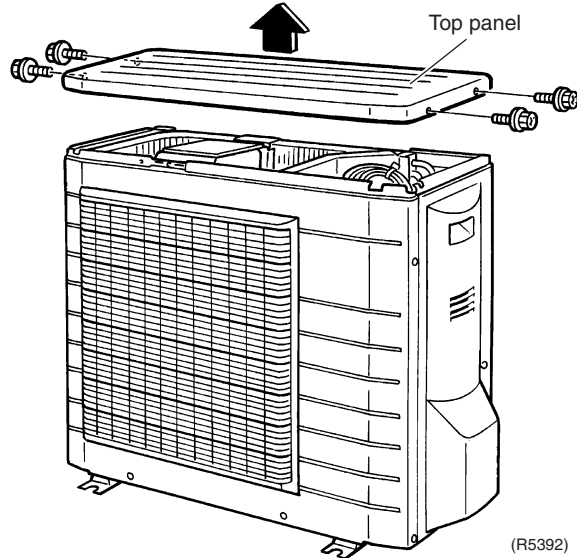
1. Removal of Outer Panels

Procedure

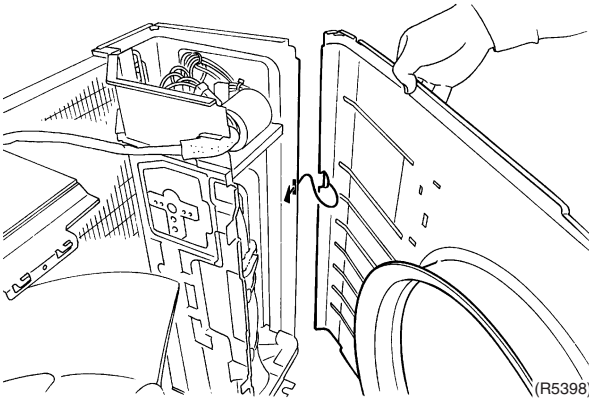
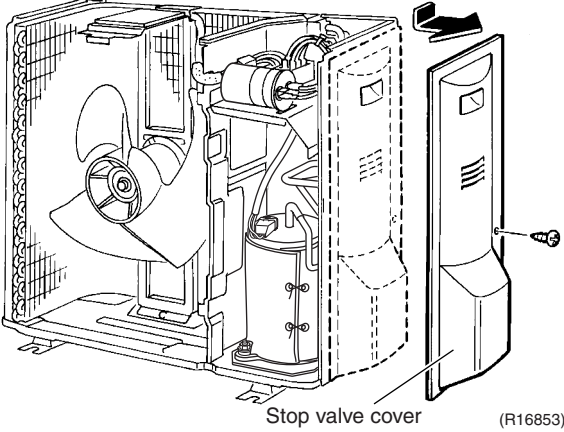
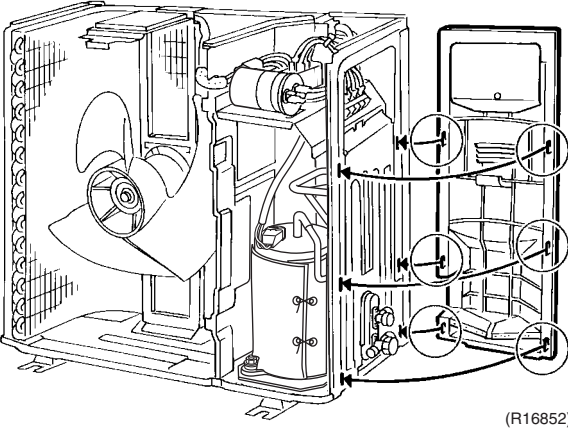


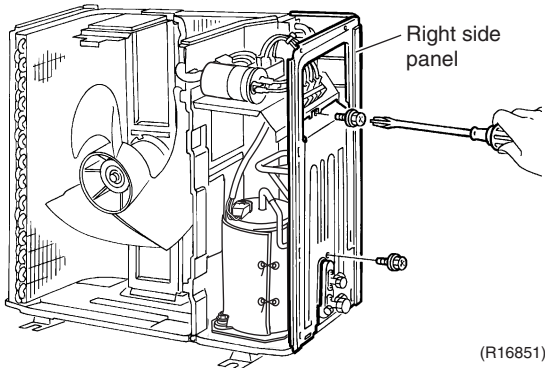
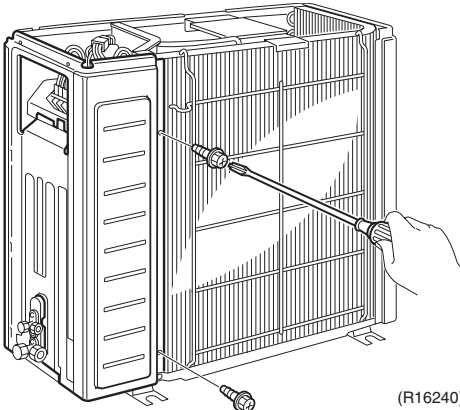
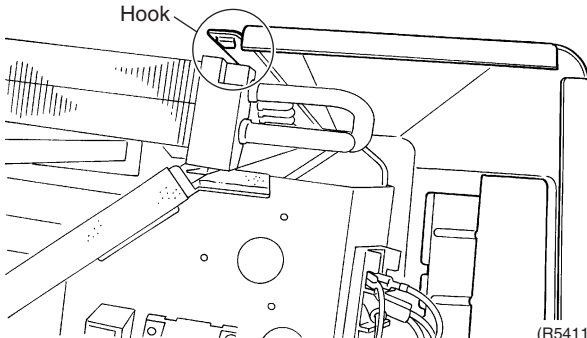
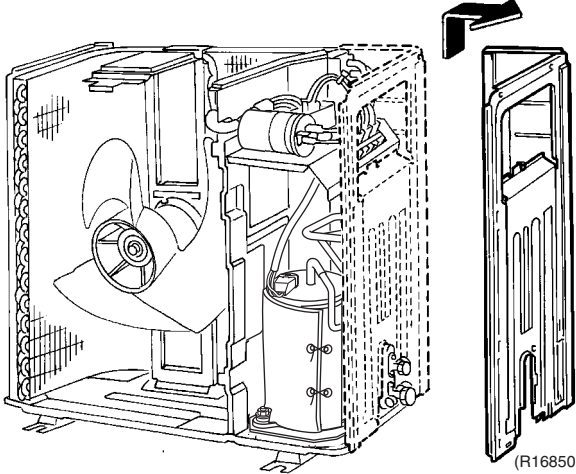
Warning Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

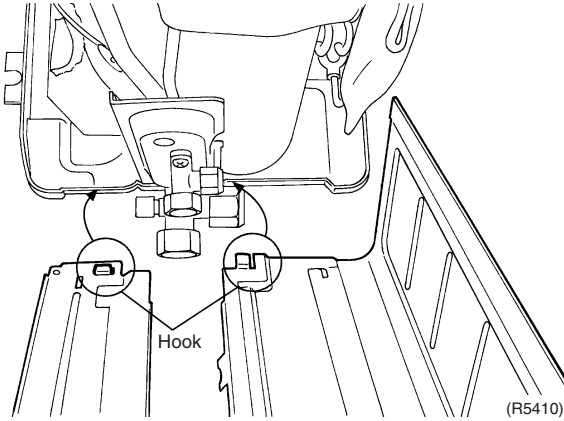
Step	Procedure	Points
1	Remove the 4 screws and remove the top panel.	<ul style="list-style-type: none"> Take care not to cut your finger by the fins of the outdoor heat exchanger.
2	Remove the 4 screws and remove the discharge grille.	



Step	Procedure	Points
3	Remove the 6 screws of the front panel.	
4	Unfasten the center hooks in the order of (1) to (2).	
5	Lift the left side of the front panel and unfasten the 3 hooks.	

Step	Procedure	Points
6	Unfasten the hook on the right side and remove the front panel.	
	 <p>(R5398)</p>	
7	Remove the screw and remove the stop valve cover.	
	 <p>Stop valve cover (R16853)</p>	
	 <p>(R16852)</p>	<p>■ The stop valve cover has 6 hooks.</p>

Step		Procedure	Points
8	Remove the 4 screws of the right side panel.	 <p>(R16851)</p>  <p>(R16240)</p>	
9	Unfasten the hook at the rear side.	 <p>(R5411)</p>	
10	Lift up and remove the right side panel.	 <p>(R16850)</p>	

Step	Procedure	Points
	 <p>(R5410)</p>	<ul style="list-style-type: none">■ When reassembling, fit the 2 lower hooks.

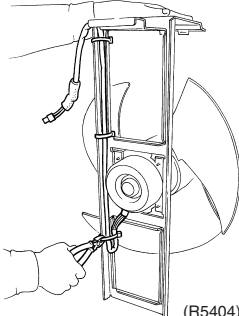
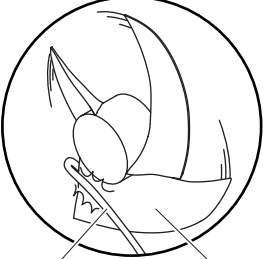
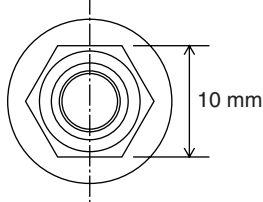
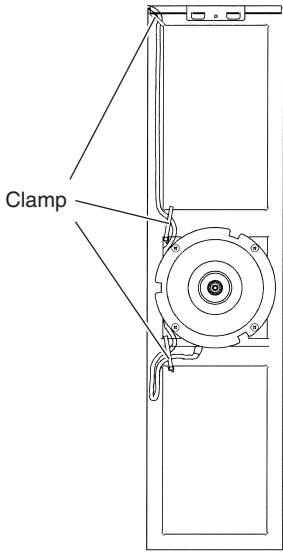
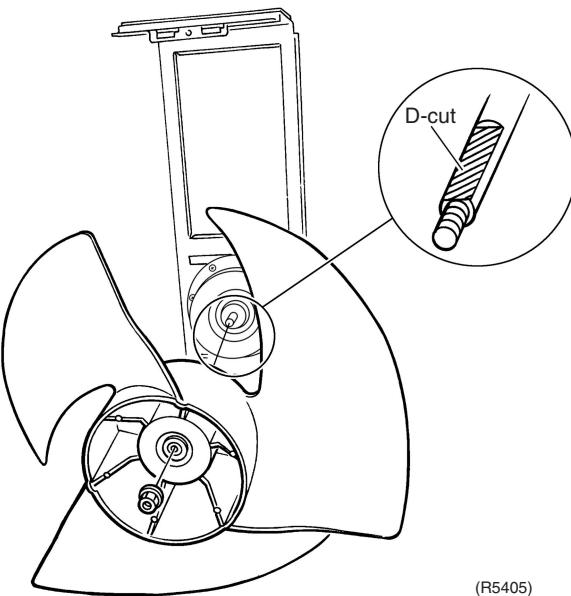
2. Removal of Outdoor Fan / Fan Motor

Procedure

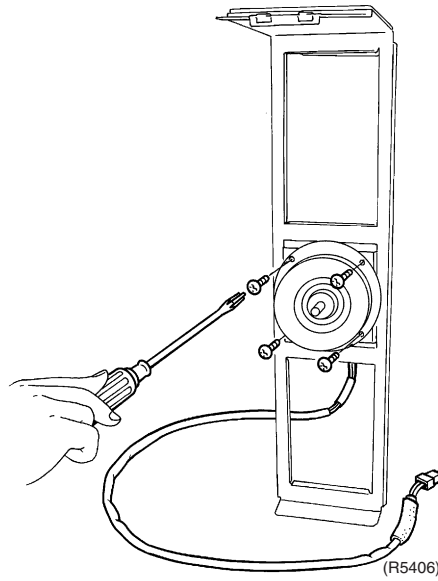


Warning Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Disconnect the relay connector for the fan motor.	(R16233)
2	Remove the 2 screws of the fan motor fixing plate.	(R16234)
3	Lift up and remove the fan motor fixing plate.	<ul style="list-style-type: none"> ■ Be careful so as not to damage the top part of the outdoor heat exchanger fins.
		(R16849)

Step	Procedure	Points
4	Cut the 3 clamps and release the fan motor lead wire.	<ul style="list-style-type: none"> Some models have the 3 clamps at the different positions.  <p>(R5404)</p> <ul style="list-style-type: none"> Put the fan motor lead wire through the back of the fan motor when reassembling so as not to be entangled with the outdoor fan.
5	Remove the nut and remove the outdoor fan.	 <p>Lead wire Outdoor fan (R3249)</p> <ul style="list-style-type: none"> Nut size: M6  <p>(R17447)</p> <ul style="list-style-type: none"> Align the ▼ mark of the outdoor fan with the D-cut section of the motor shaft when reassembling.
	 <p>(R17195)</p>  <p>(R5405)</p>	

Step	Procedure	Points
6	Remove the 4 screws and remove the fan motor.	



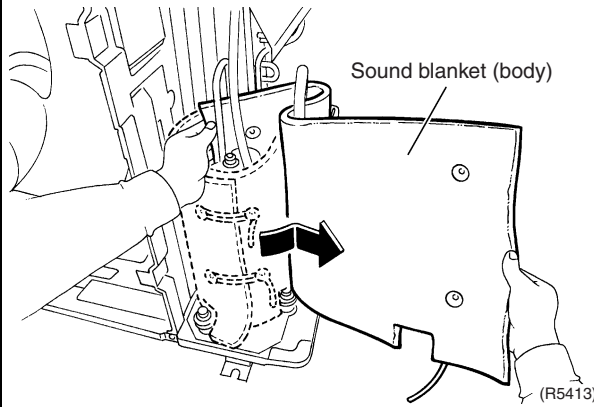
3. Removal of Sound Blanket

Procedure



Warning Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the sound blanket (body).	<ul style="list-style-type: none"> ■ Some models have no sound blanket.

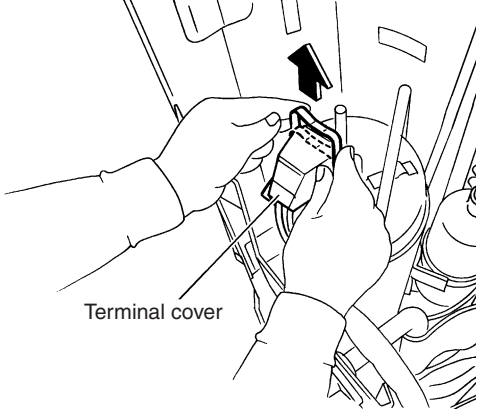
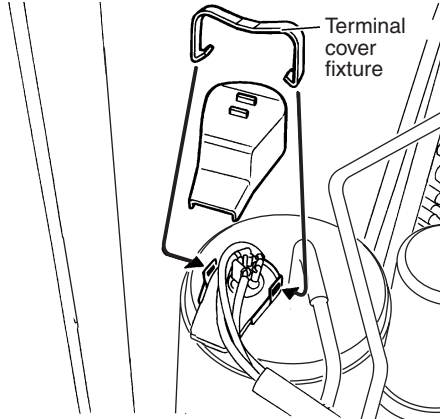
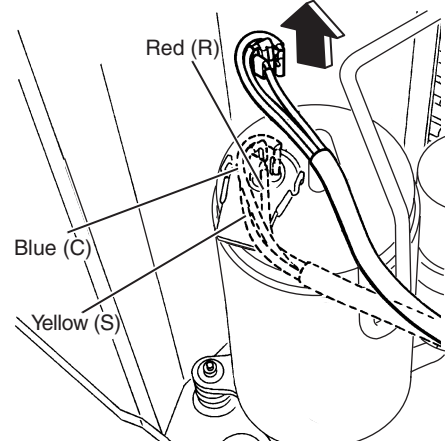
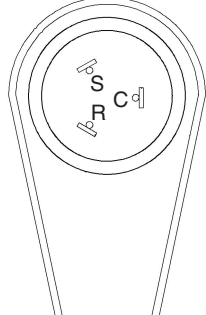
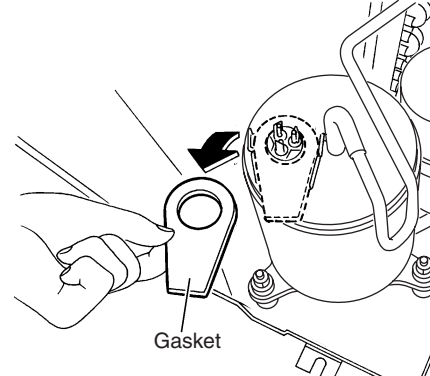


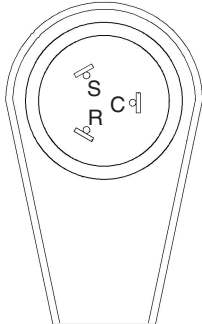
4. Removal of Electrical Component ASSY

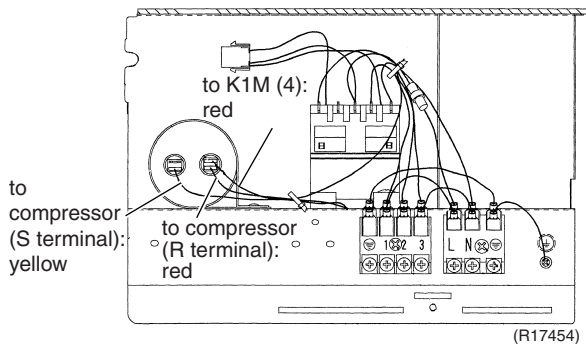
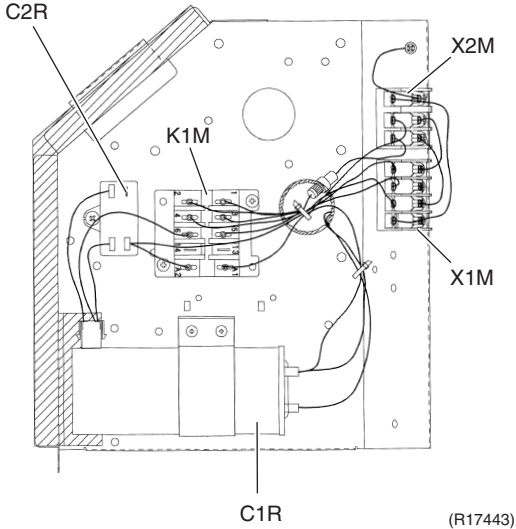
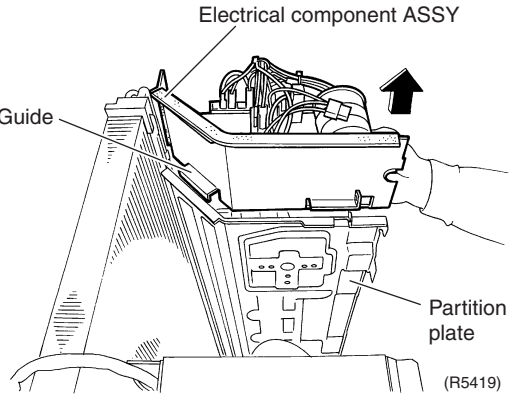
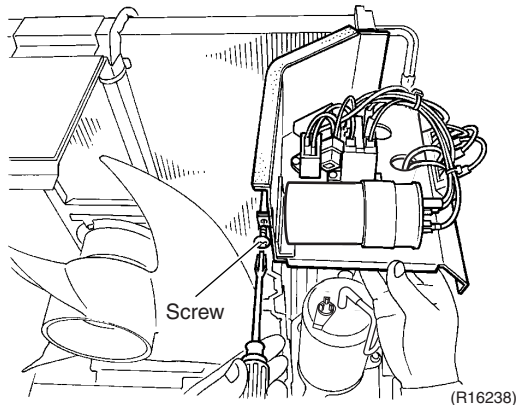
Procedure



Warning Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the terminal cover.	 <p>Terminal cover</p> <p>(R16171)</p>  <p>Terminal cover fixture</p> <p>(R16227)</p>	
2	Disconnect the compressor lead wires.	 <p>Red (R)</p> <p>Blue (C)</p> <p>Yellow (S)</p> <p>(R16228)</p>	<p>■ Be careful so as not to burn the compressor terminals or the name plate.</p>  <p>(R12819)</p>
3	Remove the gasket.	 <p>Gasket</p> <p>(R16229)</p>	<p>S: yellow C: blue R: red</p>

Step	Procedure	Points
4	Remove the screw of the electrical components ASSY.	
5	Lift up the electrical component ASSY and unfasten the guide for the partition plate. Remove the electrical component ASSY.	<p>■ Compressor lead wire</p>  <p>S: yellow C: blue R: red</p>

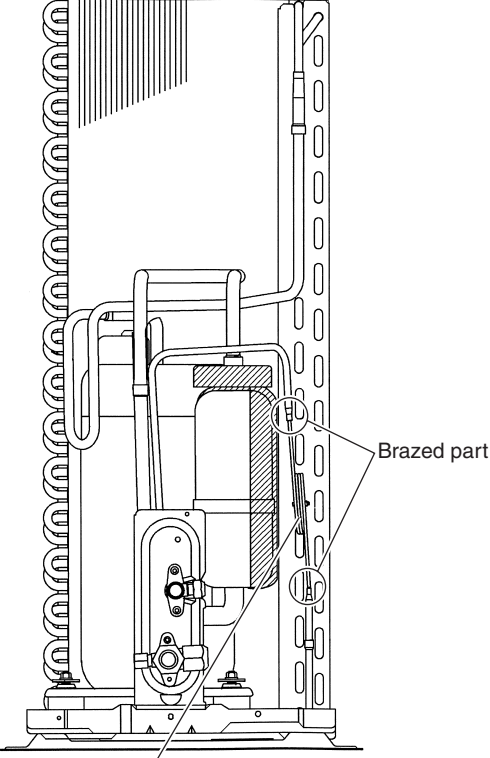
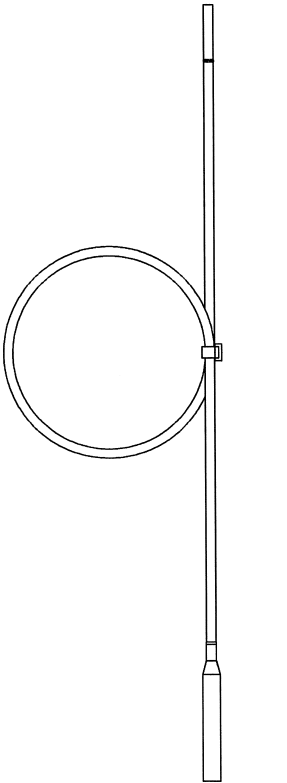


5. Removal of Capillary Tube

Procedure



Warning Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.


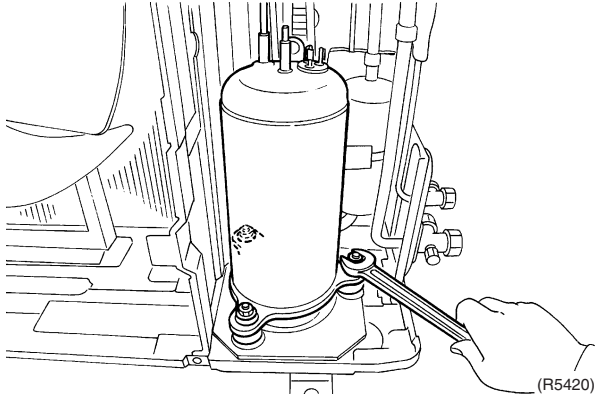



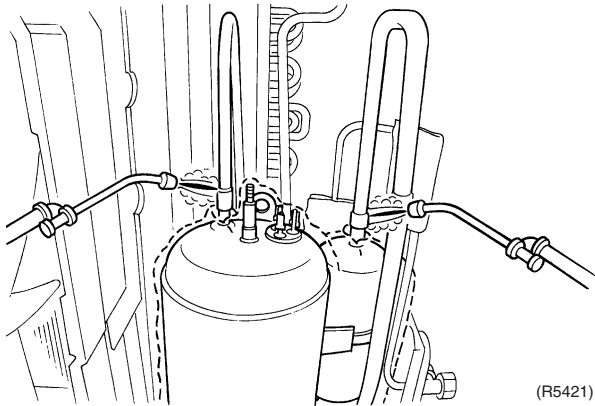
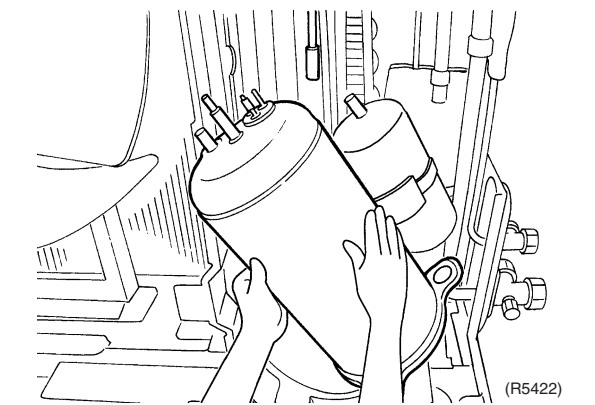
Step	Procedure	Points
<ul style="list-style-type: none"> ■ Before working, make sure that the refrigerant gas is empty in the circuit. ■ Be sure to apply nitrogen replacement when heating up the brazed part. 	 <p style="text-align: center;">Capillary tube</p> <p style="text-align: right;">(R16257)</p>	<p>Warning Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p>Warning If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p>Caution From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p> <p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. 2. Avoid excessive heating. (Keep below 120°C)
<p>Note:</p> <ul style="list-style-type: none"> ■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit. ■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed. ■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries. ■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin. 	 <p style="text-align: center;">(R16258)</p>	<p>In case of difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.

6. Removal of Compressor ASSY

Procedure



Warning Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the 3 nuts of the compressor.	<p> Warning Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p>
<ul style="list-style-type: none"> ■ Before working, make sure that the refrigerant gas is empty in the circuit. ■ Be sure to apply nitrogen replacement when heating up the brazed part. 	 <p style="text-align: right;">(R5420)</p>	<p> Warning If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p>
2	Heat up the brazed part of the discharge side and disconnect.	<p> Warning Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p>
3	Heat up the brazed part of the suction side and disconnect.	<p> Caution From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
4	Lift the compressor ASSY up and remove it.	<p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. 2. Avoid excessive heating. (Keep below 120°C) <p>In case of difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.
<p>Note:</p> <ul style="list-style-type: none"> ■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit. ■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed. ■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries. ■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin. 	 <p style="text-align: right;">(R5421)</p>	<p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. 2. Avoid excessive heating. (Keep below 120°C) <p>In case of difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.
	 <p style="text-align: right;">(R5422)</p>	

Revision History

Month / Year	Version	Revised contents
08/2012	Si011194	First edition

Warning



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved